 




**DRY IRON
INSTRUCTION MANUAL
CM17FI-3**

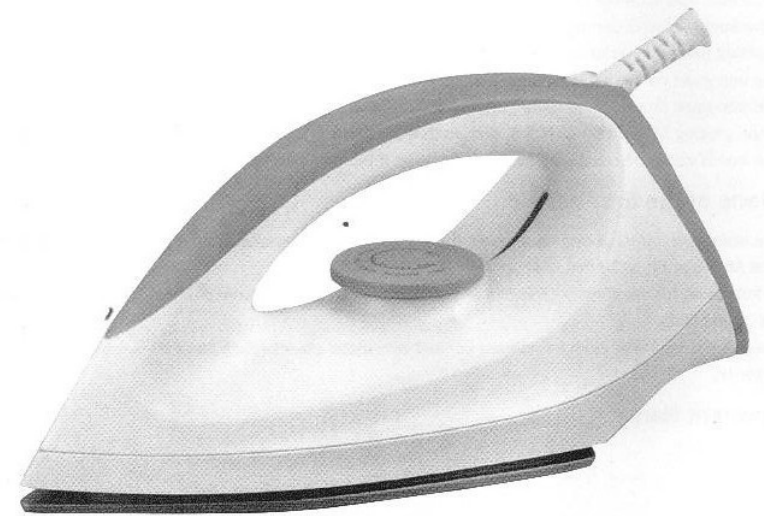

Please read these instructions for use and have a good look at the illustration before using the appliance

Specifications:

Model No.: CM17FI-3

Functions: Dry Iron

Rated parameter: 220V~60Hz 1065W

Type of Fabric: Nylon, Silk, Wool, Cotton, Linen

Safety Instructions:

 
When using your iron, basic safety precautions should always be followed:

1. Make sure the power used corresponds with the one indicated on the rating label.
2. Use the iron only for needed use as described in the instruction manual.
3. Close supervision is necessary when any appliance is used near children. Do not leave iron unattended while connected or on an ironing board. Burns can occur from touching hot metal parts, hot water or steam.
4. Keep the iron out of reach of children.
5. Unplug the iron from the mains electrical supply before:
 - 1) Cleaning
 - 2) Immediately after use
6. Never operate the iron with damaged power cord or plug, or after it has fallen or been damaged in any way. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair.
7. Do not let cord touch hot surfaces.
8. To protect against a risk of electric hazards, do not immerse the iron in water or any other liquid.
9. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
10. The iron must not be left unattended while it is connected to the mains supply.
11. The iron must be used and rested on a stable surface.
12. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
13. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

Cautions of the first use:

1. The iron been greased, and as a result, the iron may slightly smoke when switched on for the first time. After a short while, this will cease.
2. Before using for the first time, remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
3. Keep the soleplate smooth, avoid hard contact with metal objects (such as clothes rack, button and slide fastener)

Component Name:

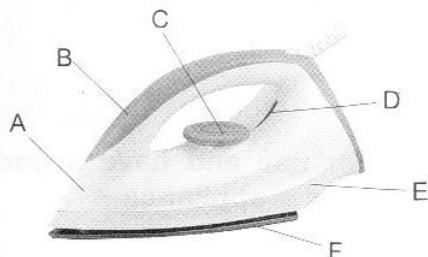
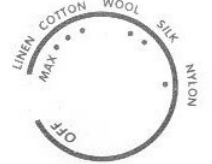 




- A---Body
- B---Up Cover
- C---Thermostat Dial
- D---Power Indicator Light
- E---Skirt
- F--- Soleplate

Dry Ironing:

1. Before running the iron, please classify the clothes as per its washing label, as it will be quicker for the iron to heat up than to cool, the clothes (such as synthetic fabric, silk etc) with lower ironing temperature shall be ironed firstly, and then iron the clothes (such as wool, cotton and linen etc) with higher temperature.
2. Stand the iron on its end, and turn the thermostat dial to the MIN position.
3. Plug in the iron and select the temperature by turning the thermostat dial. Wait until the indicator light goes off showing that the required temperature had been reached.

Type of Fabric and Thermostat Dial Form:

Instructions on Label	Type of Fabric	Thermostat dial	
	Nylon Silk	MIN	
	Wool	↑	
	Cotton		
	Linen		

Caution: If the fabric consists of various kinds of fibers, always select the lowest ironing temperature of the composition of those fibers.

After Ironing:

Unplug from the mains socket.

Cleaning and Maintenance:

Before cleaning, remove the plug from the socket and allow the iron to cool down sufficiently.

1. Wipe off the soleplate with a damp cloth and a non-abrasive (liquid) cleaner.
2. If the fiber is adhered to the soleplate, use a damp cloth with vinegar to wipe off the soleplate.
3. Never use strong acid or alkali in order to avoid damaging the soleplate.
4. Stand the iron on its end and let it cool down sufficiently, and meantime pour any remaining water out of the tank.