



**1** Grab and hold the top portion of the dispenser casing on one hand.



**2** Turn the dispenser 45 degrees clockwise (back side of the dispenser facing you) and take note of the white lever.



**3** While holding the dispenser on one hand, firmly press the white lever until it releases the front chrome casing of the unit.



**4** While still pressing the white lever, use your forefinger to push away the rear side of the unit and to fully open the front chrome casing.



**5** Release the white lever and swing open the front chrome casing.



**6** You can now see the liquid soap tank.



**7** Firmly hold the tank and pull it away from the rear casing to remove it.



**8** The tank should be firmly held and pulled all the way out to remove it from the rear casing.



**9** Tank cover location (when filling with liquid soap)



**10** Remove the tank cover and fill with liquid soap.



**11** Replace the tank on the casing and close the front chrome casing.

**Notes:**

\*You can also refill the tank with liquid soap without removing it from the rear casing (steps #7-9) by following step #10 directly even while the tank is still installed on the rear casing  
 \*You have 3 taks with screws to install the dispenser on the wall.  
 \*Blue nozzle = foam-type; White nozzle = liquid-type

**\*Liquid soap formulation:**

For foam type dispensers: 30% liquid soap + 70% water  
 For liquid / spray type dispensers: 100% liquid soap only  
 email: sales\_mktg@colentco.com  
 tel. 632-4139503

Thank you very much.

[www.colentco.com](http://www.colentco.com)