

Instruction Manual
Air Cooler
MODEL NO.: Aircool-Z18

 
WARNING

- Do not let the wind inlet be too close to the wall , curtain and so on , or it will block the air flow and affect the wind effect.
- Using it the first time, please check if your voltage is accord with the nameplate for air cooler.
- Before use, please check if the power cord and plug are breakage, Do not the power plug twisted and turned in order to avoid poor contact.
If the power cord is damaged ,it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to a hazard
- Do not cover the outlet , and keep the air fan away from the socket .You must choose the socket which it is up to more than 10A current , and do not use the same socket with other machine .
- When air cooler is working, absolutely forbid hand or foreign body inserting the network (specially pay attention to children)
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capability, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance .
- Please turn off the power before pulling out the plug . Do not pull the power cord and do pull the power plug in order to avoid a short-circuit, fire, electric shock.
- Do not pull the power plug by wet hand in order to avoid the risk of electric shock.
- Please pull the plug away from the socket when you do not use it .
- Please do not put the working air cooler on the declining position or not smooth position.
- Please do not work air cooler when it is outdoors, or around bath(or shower, or pool).
- At anytime, the display of water level of water tank must be less than "Max."While the display of water level of water tank must be more than "Min." when air cooler is with cooling (humidifying) function .
- After water tank is injected fair water, please not lean (or bump) air cooler when remove air cooler .
- Please do not put anything on air cooler .
- Mustn't cover the outlet and inlet of air cooler.

Dear customer

We thank you for purchasing our Air cooler and kindly ask you to read and save this instruction manual carefully.

Function Control Panel

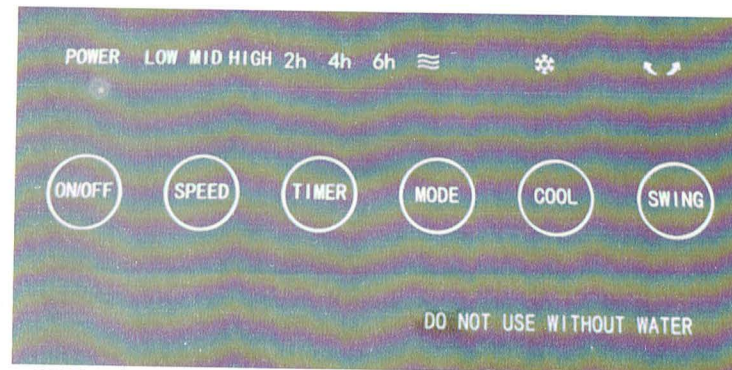

1. ON/OFF (Speed) button

- After plug the power cord, the buzzer responds a sound.
- Press the button of "low", air cooler is working with low speed .
- Press the button of "Mid?" air cooler is working with medium speed..
- Press the button of High, air cooler is working with high speed .

2. Cool button

- Press the button of Cool, the wind will be cooled if you have add the ice box.

3. Swing button

- Press the button of Swing, the blades will be left and right swing.

4. Timer button

- Press the button of Timer, set the time by pressing the timer button to select a desired timing level, the range is between 2-12 hours.

5. Mode button

- Press the button of Mode, you can choose your desired wind mode as per the following sequence: Normal-Natural-Sleep.

 
How to inject water in the water tank

Pull out the water tank from the bottom of the back (air cooler), and leak 1/3 of water tank while inject fair water into it.

- Please note the display of water level when injecting water.
- The water level of water tank must be less than "max." when injecting water.
- The water level of water tank must be more than 搽 in. 搽 hen air cooler is with cooling and humidify.
- The frozen ice boxes (or ices) are put into water tank when the client want to get the cooler wind.

Warning:


The water level of water tank is less than after fter ice boxes(or ices) is put water tank.k.

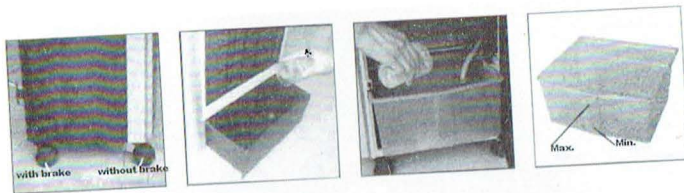

How to use ice boxes

Ice box can store cool and slowly absorb the heating from water while ice boxes can make the temperature of water in the water tank less than it of the surrounding. So. Air cooler with frozen ice boxes can blow the cooler wind.

 
- Put ice boxes in fridge. After ice boxes are frozen successfully, take ice boxes out the fridge.
- Pull the water tank out, and put the frozen ice boxes into water tank.
- One piece air cooler is with two pieces ice boxes in order that the client can make them continuously.

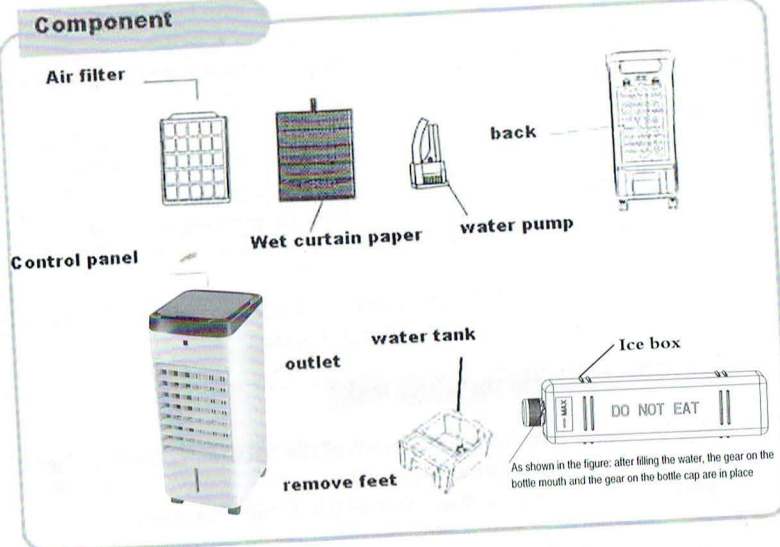


Clean



 first

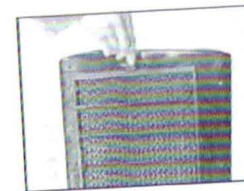

second

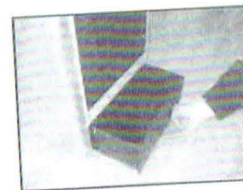 

third



fourth

- Clean air filter :
Pull off the plug, and pull the holder of air filter by hand while the air filter is took apart .and then clean air filter by neutral cleaner and soft brush .and then clean it by clean fair water , later take the air filter back air cooler.
- Clean the wet curtain paper:
Pull off the plug ,and take the air filter off, and take the wet curtain paper out air cooler. And clean the wet curtain paper by fair water after clean it with cleaner and soft brush, later put back air cooler.

Important :

In order to avoid leak, wet curtain paper must be installed smoothly.

- Clean water tank:
Pull off the plug, and take the water tank out while wipe off much scale in the water tank by towel with little cleaner, and then clean water tank by fair water, and later put back air cooler.
- Clean the housing :
Wipe off the housing by neutral cleaner and soft cloth.

Important:

When clean the air cooler, the client must pull off the plug and cut off the power while any part of control panel cannot be into water.



CE

For after-sales service:

Berton's Place #46 Sta. Rosa St. Barangay
Manresa Quezon City,
Philippines.

Tel Nos. 8442-3856; 8442-3866; 3448-7674;
3412-6155; 3413-9503;
8282-5049; 8282-5098

Email: iwata@colentco.com ,
iwata2@colentco.com , iwata3@colentco.com,
sales_mktg@colentco.com

Website: www.colentco.com