


## MAINTENANCE

**Warning:** When the filters are obviously covered with dust or the suction decreases considerably, please clean it in time, for this can improve the working efficiency and extend the life time of the cleaner.  
Never use the machine without filters.


### 1 Tear off the mesh

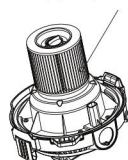

Mesh


Tear off the mesh outside the HEPA filter

### 2

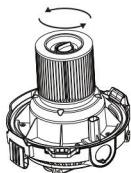


Twist the locking knob with a anti-clockwise force, take off the filters

### 3

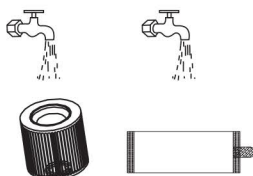


Clean it carefully

### 4

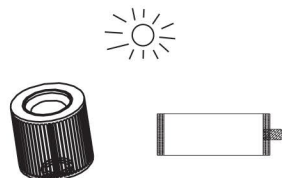

Dry by airing


### 5

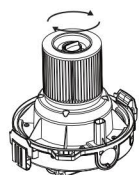

Put back the filter.



## WET & DRY VACUUM CLEANER

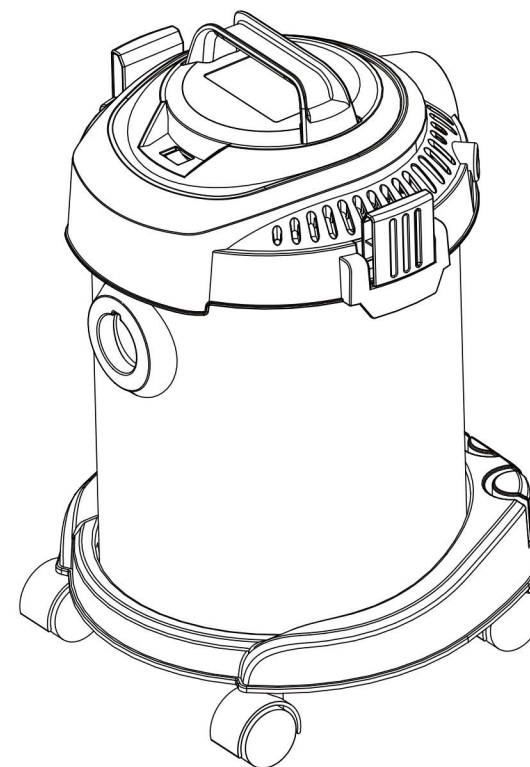

CM19WDV-12L

Please read the instruction manual prior to initial use and keep it for future reference.

For after-sales service:

Landline- 8442-3866; 3412-6155; 3413-8819; 8442-3856; 3448-7674


Mobile-0923-5345681;0917-3079188;0920-9746874

Email at sales\_mktg@colentco.com , iwata@colentco.com ,  
iwata2@colentco.com , iwata3@colentco.com

Web: www.colentco.com


## OPERATION METHOD

1

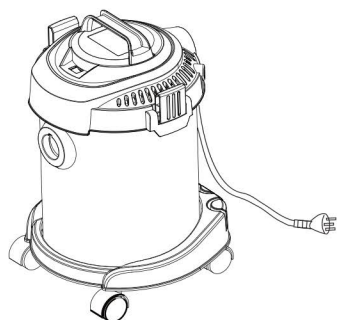

Hold the plug and insert into socket

2


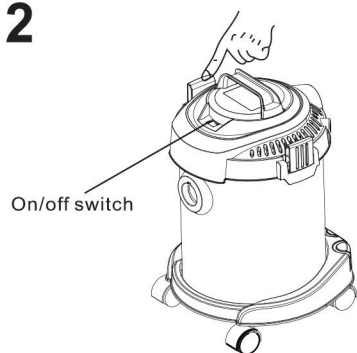


On/off switch

Press the switch button to turn on/off the cleaner

To be safe, there is a water-proof switch cover. Please replace the water-proof cover once find it broken.


## PARTS NAME

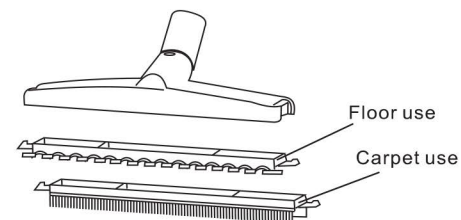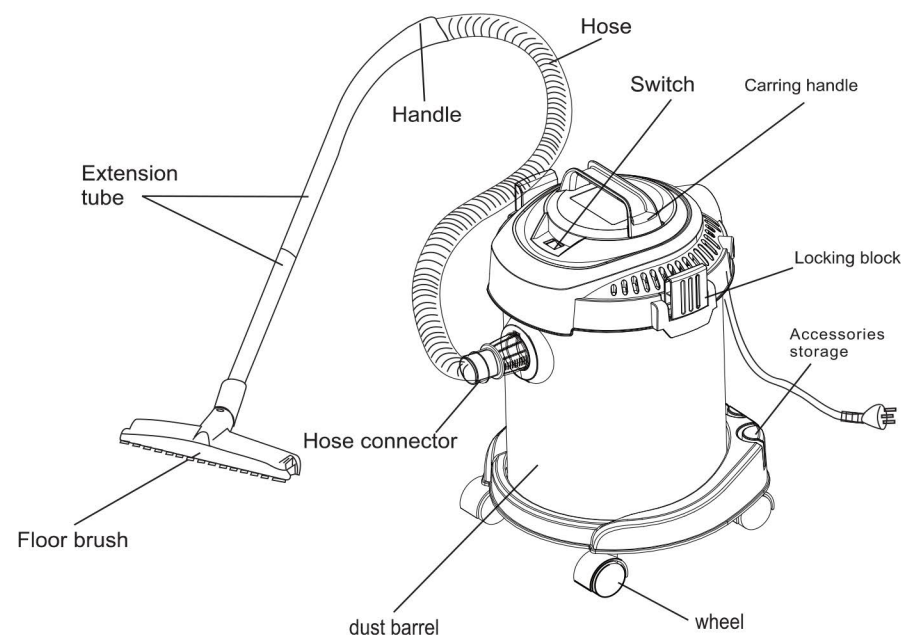

Floor brush  
For carpet and wooden floor, etc.



 
Crevice nozzle  
For corners, cracks, etc.



Bristle brush  
For sofa, bookshelf, curtain and furniture, etc.


## OPERATION METHOD

1

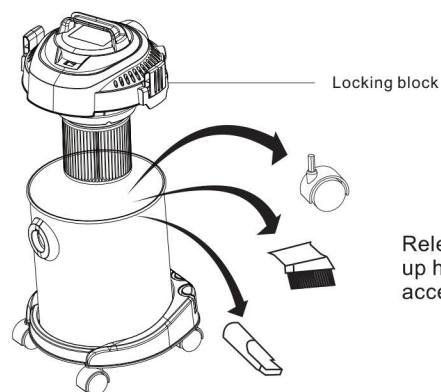


Release the lock block to open the up housing, take out wheels and accessories.

2

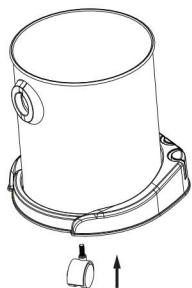

Install 4 small wheels

3

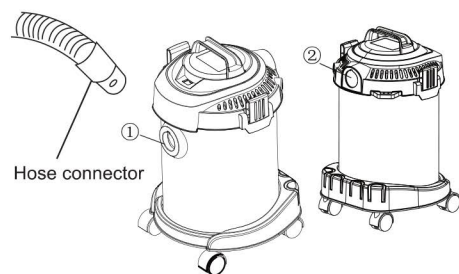


Put the hose connector into ①, the suction function is available  
Put the hose connector into ②, the blow function is available

3


## OPERATION METHOD

1

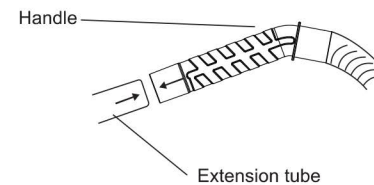


Insert the handle into the tube with a twisting force.

2

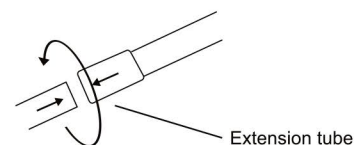


Same as above.

3

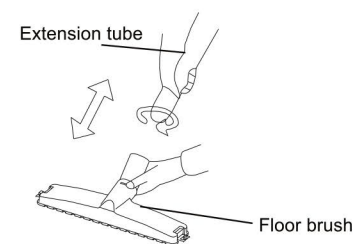

Same as picture one.

4

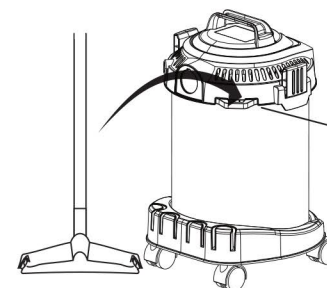

4

## SAFETY DIRECTIONS

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

## WARNING


To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors.
- Do not leave vacuum cleaner when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturers' recommended attachments.
- Do not use with damaged cord or plug.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands or operate without shoes.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brushroll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup or filter in place.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- ENSURE you turn the unit off at the very minimum every 15 minutes (for 1 minute) to let the motor cool down – failure to do so may cause motor failure.
- DO NOT use this unit for more than 4 hours (including rest breaks) on any given day.

## TO REPLACE DUST BAG


If the dust barrel is full, please empty it as soon as possible

1

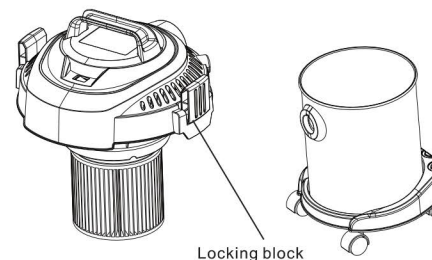


Release the lock block to open the up housing

2

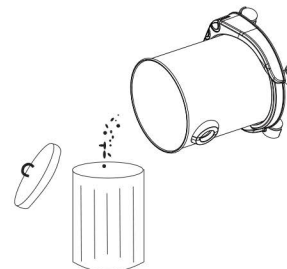

Empty the dust barrel

3

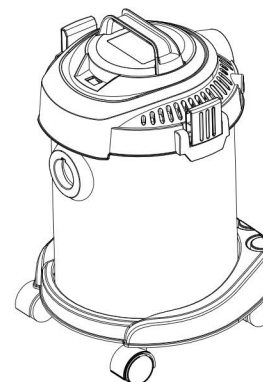

Put back the up housing, and fasten the locking block