


Electronic Dish Dryer

OPERATION MANUAL

Please read the manual in detail before you operate it,
and please keep this for future reference.

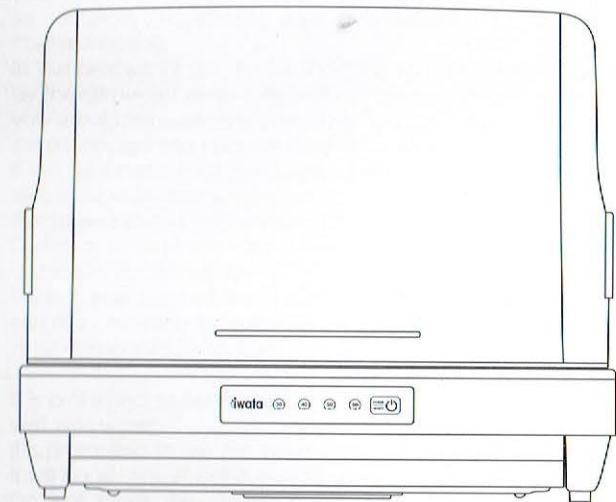

CM20DDUV-4




www.colentco.com
448-7674 / 414-9890

For after-sales service:
Landline - 8442-3866; 3412-6155; 3413-8819; 8442-3856; 3448-7674
Mobile-0923-5345681; 0917-3079188; 0920-9746874
Email at sales_mkta@colentco.com, iwata@colentco.com,
iwata2@colentco.com, iwata3@colentco.com
Web: www.colentco.com

Thank you for using our dish dryer. Before use, please read this manual carefully and correctly master the use method of this disinfectant cabinet, so as to make full use of its excellent performance. I believe it will bring convenience and comfort to you and your family life.

Please keep the instruction manual for future reference. If you encounter problems during the use, please contact us and we will serve you wholeheartedly. Thank you for your cooperation!

Notes

| | |
|---|---|
|  NOTICE | <ul style="list-style-type: none"> • Before use, the paper cover inside the cabinet must be taken out, and the nylon tie belt on the layer frame should be removed to avoid fire. • When using cleaning cabinet for the first time, empty a working period in no-load mode, and then open the cover for 20 minutes. This operation can eliminate the grease residue in the cabinet. • In case of any abnormal situation (such as abnormal noise, smell, temperature rise, smoke, etc.), unplug the power plug of the cleaning cabinet immediately, and notify the electrical maintenance center or agent to arrange inspection and maintenance, and use it again after troubleshooting. • In the process of use, if you find that you can directly see the light emitted by the ultraviolet lamp tube without passing through any transparent object, you should immediately stop using it and inform the electrical maintenance center or agent to arrange inspection and maintenance as soon as possible. • If the uv lamp tube is damaged, professional staff must be arranged by the electrical maintenance center or the agent to replace the uv lamp tube of the same power and wavelength. • During maintenance, the power plug should be removed first to ensure complete disconnection. • If the power cord of the appliance is damaged, it must be replaced by the electrical maintenance center or the agent. • After drying, please remove the power cord plug. |
|  FORBID | <ul style="list-style-type: none"> • It is prohibited to keep the cleaning cabinets in places likely to be damp or wet with water; • It is prohibited to use the heating appliance next to the cleaning cabinet, or it will cause deformation and failure of the cleaning cabinet. • Do not install the cleaning cabinets near combustible materials, or put towels, clothes and other items on or beside the cabinets; • It is strictly prohibited to open the clamping cover in the working process, or it will affect the cleaning effect, so as to avoid ultraviolet radiation leakage or scald. • The device is prohibited from being used by special users (such as children); |
|  REMINDE | <ul style="list-style-type: none"> • Disposal method for used equipment: for used equipment beyond the safe service life or without maintenance value, please sell it to qualified recycling enterprises, household appliances dealers or after-sale service institutions for disposal. Users should not throw away or disassemble them without authorization. |

Special Attention



It's better to drain the dishes and put them in the cleaning cupboard.




If tableware heat resistance less than 80°C, please do not put in this product;



Children are not allowed to play with plastic film and packing cases, which can cause suffocation.

Operating Instructions

1. Put tableware and close the door.
2. Press the selection switch button, the first working mode indicator lights up, and it will enter the working state by default after flashing for 3 seconds.
3. If you need to switch other working modes, during the flashing of the indicator, press the selection switch button repeatedly to automatically jump to the next mode.

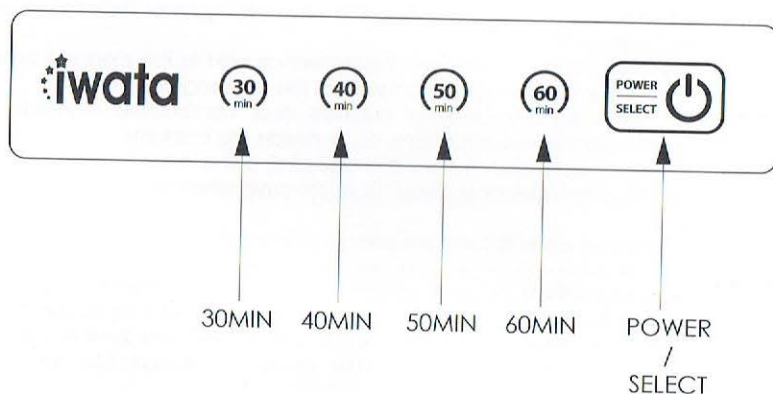


- Use the cleaning cabinet only after the cabinet door is closed, otherwise there will be ultraviolet radiation;
- Do not open the cabinet door until 10 minutes after the work of the cleaning cabinet is finished to avoid burns;
- The water on the utensils can only be put in after it has been drained. It is forbidden to put other non-food utensils such as dish towels;
- If the cabinet door needs to be opened during the work of the tableware cleaning cabinet, please press "Power" to turn off or cut off the power before opening the cabinet door. At this time, the temperature inside the cabinet is high, please handle it carefully, pay attention to high temperature, and be careful of burns;
- If it is found during use that you can directly see the light emitted by the ultraviolet light tube without passing through any light-transmitting objects (such as glass, transparent parts, etc.), you should immediately stop using it and notify the professional for repair
- The accumulated water in the water box needs to be cleaned every 5-7 days to avoid breeding of bacteria.

Maintenance

- Regular use, at least once a week, can effectively prevent bacterial growth.
- It is better to drain away the chopsticks and put them into the cleaning cabinet. It is prohibited to install the cleaning cabinet in places prone to damp or wet.
- Always clean. When cleanness should be complete after cut off, dip in with wet towel a few neuter cleaner, brush go cabinet inside and outside besmirch gently, wipe cleaner with clean wet towel again.
- If there is any abnormal phenomenon during the operation, please immediately stop using and unplug the power plug.

Components And Installation

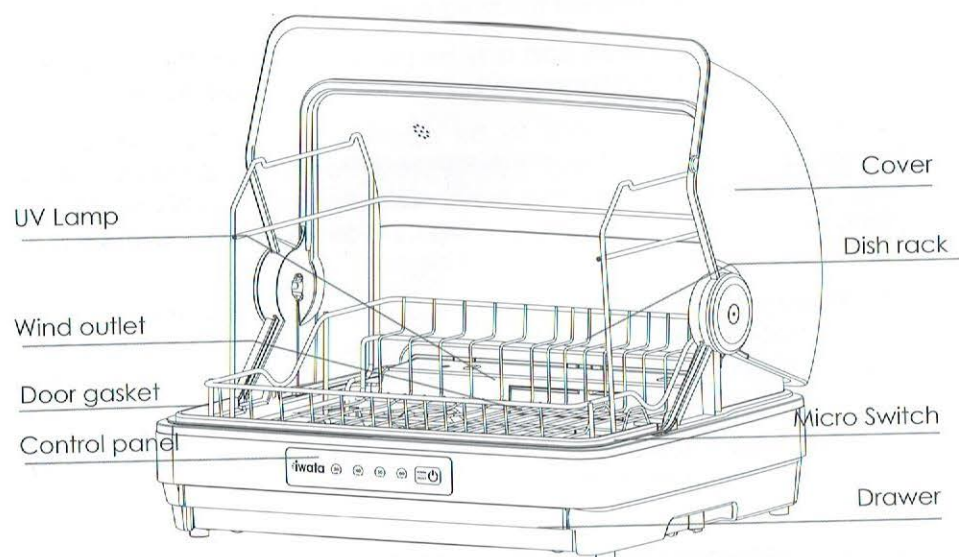

Warning

- The machine start to work after putting down the cover.
- Do not put stuff except dinnerware.
- Please open the cover after the machine finish working 10mins, and take out the dinnerware after cooling. Avoid scalding from heat.
- If necessary to open the cover, please press "Power" or shut down the power.

Troubleshooting

| Common faults | Cause analysis | Processing method |
|---------------------------------------|---------------------------------------|---|
| Machine not working | Poor contact between plug and socket | Repair or replace |
| | Power line is open | Replace the power line |
| | The power cord is broken | Replace the power cord |
| UV tube or heating tube does not work | The cover is open | Check that the cover is properly closed |
| | Door control switch not working | Replace the door switch |
| | Heating or ultraviolet tube is broken | Replace the heating or ultraviolet tube |

Specification

- **Rated voltage:** 220-240V~ 50/60Hz
- **Power:** 315W
- **Volume:** 42L
- **Working time:** 60/50/40/30min
- **Usage:** The heat resistance of tableware higher than 80°C
- **Drying temperature:** 45~80°C
- **Net weight:** 4.5kg
- **Product dimensions:** 470x395x388mm