

18 INCH STAND FAN INSTRUCTION

FOR 18 INCH STAND FAN TS-21F


SINGLE PHASE

Operating instructions

- 1、 Before inserting the Power plug into a electrical outlet, check if the voltage frequency on the data plate are in agreement with local voltage.
- 2、 Speed Control: turning the POSITION SWITCH for three speeds. The numbers 0,1,2,3, on the board indicate off, slow moderate and fast in their proper order.

WARNING:


- 1、 Do not touch the blades with hand or hard object before the fan comes to a standstill, in case of accidents happen.
- 2、 Do not pull the power cord too hard, lest it fall off.
- 3、 If the cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer.
- 4、 Before cleaning disconnect from power. Take off the front guard and blade. Use soft cloth erase oil stains. Please do not bump the blade or alter their angles.

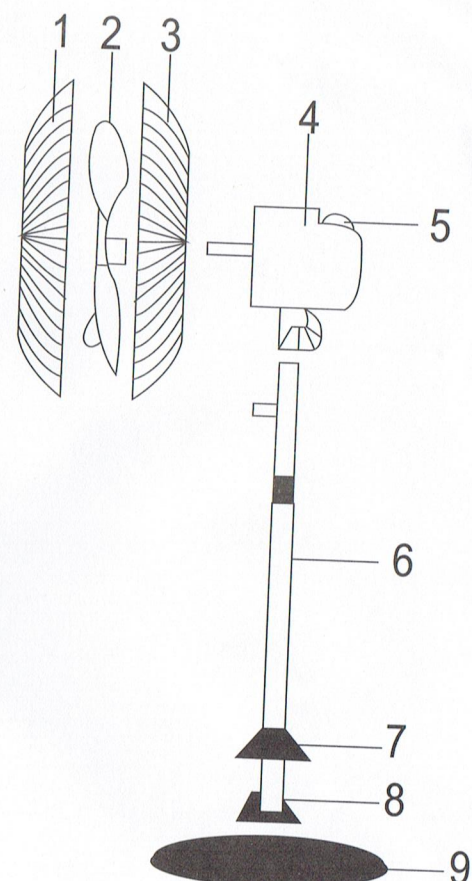

STAND FAN

1、	Front grill
2、	Blade
3、	Rear grill
4、	Motor
5、	Switch
6、	Stand
7、	Base cover
8、	Screw
9、	Base

Electric Schematic Diagram

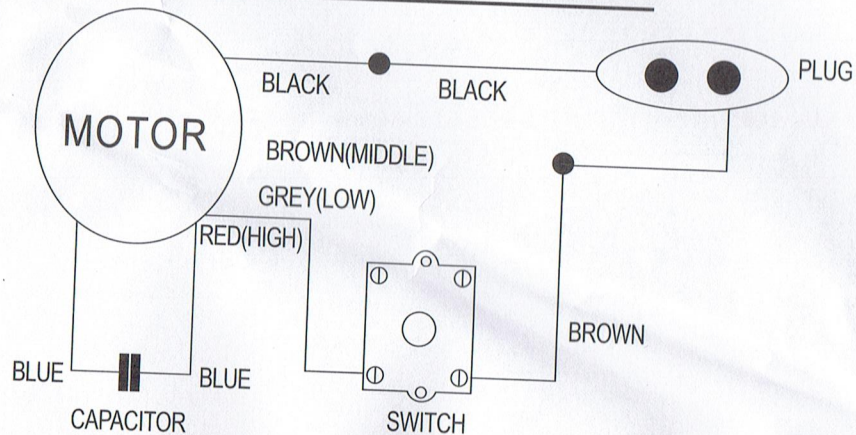

For after sales service:

Mobile:09088908597, 09173079188
 Email:iwata@colentco.com;iwata2@colentco.com;iwata3@colentco.com
 Landline:8442-3856, 8282-5098, 8282-5049, 8442-3866 Local 502, 503, 504
 www.colentco.com
 sales_mktg@colentco.com