Cooling & Comfortable Energy-saving & Environment-friendly

- Reliable quality
- Ionizer
- UV light
- Ice packs
- Larger airflow and wider cooling area
- Excellent cooling efficiency
- Automatic swing
- 3 types of wind bring more comfort
- 36L water storage
- Energy-saving, environment-friendly
- Easy to use, easy to clean and maintain

For after-sales service:

Berton's Place #46 Sta. Rosa St. Barangay Manresa Quezon City, Philippines.

Tel Nos. 8442-3856; 8442-3866; 3448-7674; 3412-6155; 3413-9503;

8282-5049; 8282-5098

 $Email: iwata@colentco.com\ ,\ iwata2@colentco.com\ ,\ iwata3@colentco.com,\\ sales\ mktg@colentco.com$

Website: www.colentco.com



4-IN-1 · AIR-COOLER · AIR-CLEANER
FUNCTION · HUMIDIFIER · FAN

Portable Evaporative Air Cooler UVJET-M20



CONTENT

Preface		02
Package	Major of his or a reference	02
Technical specification	ng Saletavi I wan digarasi s	03
Feature		03
	at the second	
Control panel	in the site of the second seco	04
Control panel Operation instruction		04
Basic principle		05
Application range		05
Warning		06
Operation instruction		06
Troubleshooting	p. 18 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1	07
Cleaning		08

UVJET-M20 PREFACE

Thank you for choosing our portable evaporative air cooler IWATA-UVJET-M20

This manual provides you with detailed information of evaporative air cooler UVJET-M20 including technical data, product feature, operation instruction, cleaning, maintenance and troubleshooting, etc. Please read it carefully before operation.

We believe that cooling and fresh air of our portable evaporative air cooler UVJET-M20 will give you comfort and better health.

Package

Portable evaporative air cooler UVJET-M20	1 PC
User manual	1 PC

iwata

UVJET-M20 TECHNICAL SPECIFICATION

Model	UVJET-M20	
Max. airflow	4,200 M³/H	
Voltage/Frequency	220V/60HZ	
Power consumption	160 W	
Fan type	Axial	
Water consumption	2-3 L/H	
Water storage	36 L	
Dimension	495×360×980 MM	
Net weight	11.50 KG	
Cooling capacity	20-25 M ²	
Climate	Т	

UVJET-M20 FEATURE


- Ionizer
- UV light
- Ice packs
- Larger airflow and wider cooling area
- Excellent cooling efficiency
- Automatic swing
- 3 types of wind bring more comfort
- 36 L water storage
- Energy-saving, environment-friendly
- Easy to use, easy to clean and maintain

03

UVJET-M20 CONTROL PANEL



UVJET-M20 CONTROL PANEL OPERATION

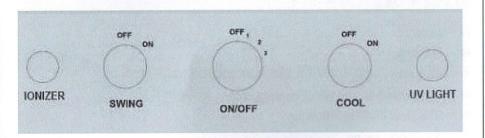


UVJET-M20 BASIC PRINCIPLE

Have you ever wondered why you feel cooler by the sea? This is because the hot air is blown over water, causes some of the water evaporate and absorbs the heat. An evaporative air cooler works on the same basic principle.

When the fan runs inside the air cooler, evaporation is created. Fresh air is sucked into the air cooler through the wet cooling pad. As the hot air passes over the wet surface of cooling pad, the water evaporates into the air stream. This moist air absorbs the heat and therefore cools the air.

Evaporative air cooler is a high-tech product, now this type of product is used widely in many countries.

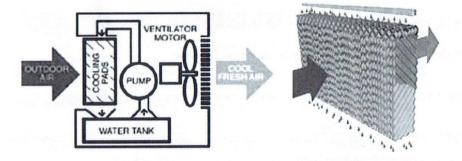

UVJET-M20 APPLICATION RANGE

- 1- Shopping mall, supermarket, school, company office, dormitory, family living room, public waiting room, workshop, temple, mosque, indoor/outdoor teahouse, coffee bar, restaurant, recreation facilities, etc.
- 2- Industrial fields such as weaving factories, woolen textile factories, silk factories, socks factories, knitwear factories, cotton spinning factories, flax textile factories, garment workshop, leather industries and shoes-making factories; etc.

UVJET-M20 WARNING



- 1. All electrical repairs must only be carried out by a suitably qualified electrician, after all power is disconnected.
- 2. This cooler is not intended for use by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
- 3. Children should be supervised to ensure that they do not play with the appliance.

UVJET-M20 OPERATION INSTRUCTION

IONIZER: Press this key to activate anion function.

SWING: Turn this key to make louvers swing leftwards and rightwards.

ON/OFF: Turn this key to switch off the air cooler, and choose desirable fan speed: Low—Medium—High.

COOL: Turn this key to choose pump works or not.

UV LIGHT: Press this key to activate UV sterilization function.

iwata

UVJET-M20 TROUBLESHOOTING

Problem	Possible cause	Solution
	Power failure	Check power supply
Unable to start the	Loose switch connection	Check switch connection
fan	Switch damaged	Replace switch
	Fuse blown	Replace fuse
Low or no airflow	Fan damaged	Replace fan
	Cooling pad clogged	Clean cooling pad
	Starting capacitor damaged	Replace capacitor
	Switch damaged	Replace switch
	Fan stuck	Check fan and its housing
No cooling airflow	No water	Fill water into tank
	Cooling pad clogged	Clean cooling pad
	Water pump damaged	Replace water pump
	Water pipe disconnected	Tighten water pipe
	Water distributor blocked	Check water distributor
Grill does not swing	Swing motor damaged	Replace swing motor
	Swing motor mechanism	Check swing motor
	disconnected	crankshaft
Leak from drainage outlet	Loose drainage plug	Tighten the cap
	Rubber O-ring damaged	Replace O-ring
Water splashes out of grill	Water pipe disconnected	Tighten water pipe

Note: Please contact our service center or qualified technicians for further inspection if the malfunction is not listed above.

UVJET-M20 CLEANING

To ensure the air cooler deliver fresh and clean air, change the water and the cooling pad Regularly.

Cleaning the cooling pad.

- 1- Remove plug from wall socket.
- 2- Take out cooling pad from air cooler.
- 3- Clean it from inner-side to out-side with common city water.
- 4- Never use any detergent and high pressure water.
- 5- Make sure cooling pad dry before installation.

Clean water tank

- 1- Unscrew the drainage cap and clean the water tank..
- 2- Clean it with mid detergent on a towel and then wash it in water.

Cleaning air cooler casing and inner parts

- 1- Clean the casing with mild soap and soft clean cloth.
- 2- Never use chemical detergent, it maybe causes damage to the surface of air cooler.
- 3- Wash off dirt on water pump and float valve.

NOTE:

Empty and dry water tank if air cooler is not used for long time.