

Cooling & Comfortable

Energy-saving & Environment-friendly

- Reliable quality
- Ice packs
- Ionizer
- UV light
- Larger airflow and wider cooling area
- Excellent cooling efficiency
- Automatic swing
- 3 types of wind bring more comfort
- 36L water storage
- Energy-saving, environment-friendly
- Easy to use, easy to clean and maintain

For after-sales service:

Berton's Place #46 Sta. Rosa St. Barangay Manresa Quezon City,
Philippines.

Tel Nos. 8442-3856; 8442-3866; 3448-7674; 3412-6155; 3413-9503;
8282-5049; 8282-5098


Email: iwata@colentco.com , iwata2@colentco.com , iwata3@colentco.com,
sales_mktg@colentco.com

Website: www.colentco.com

iwata

6-IN-1 • AIR-COOLER • AIR-CLEANER • HUMIDIFIER
FUNCTION • FAN • IONIZER • UV LIGHT

Portable Evaporative Air Cooler UVJET-M20R

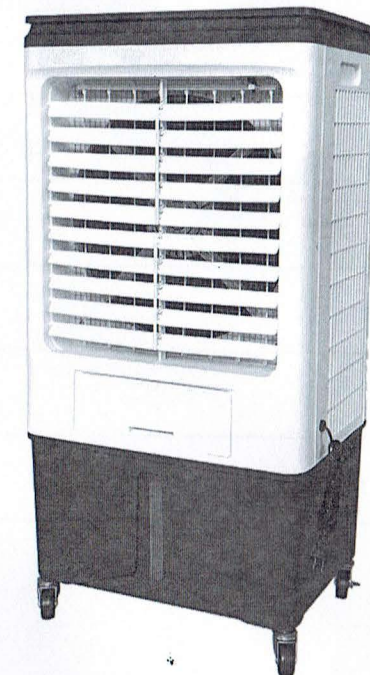

CONTENT

<u>Preface</u>	<u>02</u>
<u>Package</u>	<u>02</u>
<u>Technical specification</u>	<u>03</u>
<u>Feature</u>	<u>03</u>
<u>Control panel</u>	<u>04</u>
<u>Control panel Operation instruction</u>	<u>04</u>
<u>Basic principle</u>	<u>05</u>
<u>Application range</u>	<u>05</u>
<u>Warning</u>	<u>06</u>
<u>Operation instruction</u>	<u>06</u>
<u>Troubleshooting</u>	<u>07</u>
<u>Cleaning</u>	<u>08</u>

UVJET-M20R PREFACE

Thank you for choosing our portable evaporative air cooler IWATA-UVJET-M20R

This manual provides you with detailed information of evaporative air cooler UVJET-M20R including technical data, product feature, operation instruction, cleaning, maintenance and troubleshooting, etc. Please read it carefully before operation.

We believe that cooling and fresh air of our portable evaporative air cooler UVJET-M20R will give you comfort and better health.

Package

Portable evaporative air cooler UVJET-M20R	1 PC
User manual	1 PC


UVJET-M20R TECHNICAL SPECIFICATION

Model	UVJET-M20R
Max. airflow	4,200 M ³ /H
Voltage/Frequency	220V/60HZ
Power consumption	160 W
Fan type	Axial
Water consumption	2-3 L/H
Water storage	36 L
Dimension	495×360×980 MM
Net weight	11.50 KG
Cooling capacity	20-25 M ²
Climate	T


UVJET-M20R FEATURE

- Ionizer
- UV light
- Ice packs
- Larger airflow and wider cooling area
- Excellent cooling efficiency
- Automatic swing
- 3 types of wind bring more comfort
- 36 L water storage
- Energy-saving, environment-friendly
- Easy to use, easy to clean and maintain

UVJET-M20R CONTROL PANEL

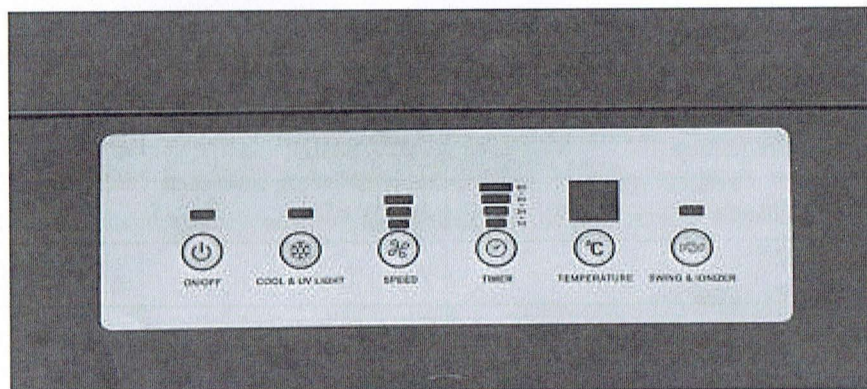

UVJET-M20R CONTROL PANEL OPERATION

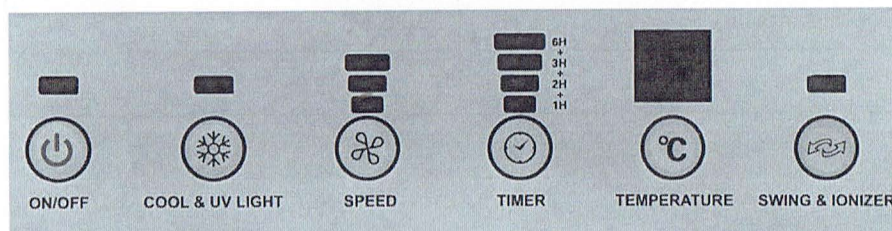


UVJET-M20R BASIC PRINCIPLE

Have you ever wondered why you feel cooler by the sea? This is because the hot air is blown over water, causes some of the water evaporate and absorbs the heat. An evaporative air cooler works on the same basic principle.

When the fan runs inside the air cooler, evaporation is created. Fresh air is sucked into the air cooler through the wet cooling pad. As the hot air passes over the wet surface of cooling pad, the water evaporates into the air stream. This moist air absorbs the heat and therefore cools the air.

Evaporative air cooler is a high-tech product, now this type of product is used widely in many countries.

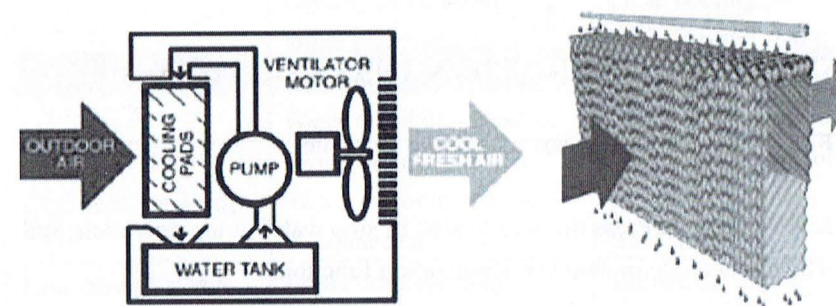

UVJET-M20R APPLICATION RANGE

- 1- Shopping mall, supermarket, school, company office, dormitory, family living room, public waiting room, workshop, temple, mosque, indoor/outdoor teahouse, coffee bar, restaurant, recreation facilities, etc.
- 2- Industrial fields such as weaving factories, woolen textile factories, silk factories, socks factories, knitwear factories, cotton spinning factories, flax textile factories, garment workshop, leather industries and shoes-making factories; etc.

UVJET-M20R WARNING



1. All electrical repairs must only be carried out by a suitably qualified electrician, after all power is disconnected.
2. This cooler is not intended for use by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge.
3. Children should be supervised to ensure that they do not play with the appliance.

UVJET-M20R OPERATION INSTRUCTION

ON/OFF: Press this key to start or stop the air cooler.

COOL & UV LIGHT: Press this key to start or stop water pump operation, and in meanwhile to activate or stop UV sterilization function.

SPEED: Press this key to choose desirable fan speed: Low→Medium→High.

TIMER: Press this key one time, it is one hour; press twice, it is two hours press twelve times, it is twelve hours.

SWING & IONIZER: Press this key to start or stop swing function, and in meanwhile to activate or stop anion function.

UVJET-M20R TROUBLESHOOTING

Problem	Possible cause	Solution
Unable to start the fan	Power failure	Check power supply
	Loose switch connection	Check switch connection
	Switch damaged	Replace switch
	Fuse blown	Replace fuse
Low or no airflow	Fan damaged	Replace fan
	Cooling pad clogged	Clean cooling pad
	Starting capacitor damaged	Replace capacitor
	Switch damaged	Replace switch
No cooling airflow	Fan stuck	Check fan and its housing
	No water	Fill water into tank
	Cooling pad clogged	Clean cooling pad
	Water pump damaged	Replace water pump
Grill does not swing	Water pipe disconnected	Tighten water pipe
	Water distributor blocked	Check water distributor
	Swing motor damaged	Replace swing motor
	Swing motor mechanism disconnected	Check swing motor crankshaft
Leak from drainage outlet	Loose drainage plug	Tighten the cap
Water splashes out of grill	Rubber O-ring damaged	Replace O-ring
	Water pipe disconnected	Tighten water pipe

Note : Please contact our service center or qualified technicians for further inspection if the malfunction is not listed above.

UVJET-M20R CLEANING

To ensure the air cooler deliver fresh and clean air, change the water and the cooling pad Regularly.

Cleaning the cooling pad.

- 1- Remove plug from wall socket.
- 2- Take out cooling pad from air cooler.
- 3- Clean it from inner-side to out-side with common city water.
- 4- Never use any detergent and high pressure water.
- 5- Make sure cooling pad dry before installation.

Clean water tank

- 1- Unscrew the drainage cap and clean the water tank..
- 2- Clean it with mid detergent on a towel and then wash it in water.

Cleaning air cooler casing and inner parts

- 1- Clean the casing with mild soap and soft clean cloth.
- 2- Never use chemical detergent, it maybe causes damage to the surface of air cooler.
- 3- Wash off dirt on water pump and float valve.

NOTE:

Empty and dry water tank if air cooler is not used for long time.