

Instructions on Label	Type of Fabric	Thermostat dial	
	Nylon/Silk	MIN	
	Wool		
	Cotton		
	Linen		

Caution: If the fabric consists of various kinds of fibers, always select the lowest ironing temperature of the composition of those fibers.

After Ironing:

To extend the working life of the iron, whenever you finish ironing, you are recommended to empty the reservoir as follows:

Unplug from the mains socket. Empty the iron. Shake it lightly above a sink. To dry the remaining moisture, turn the iron on again with the thermostat dial in the MAX position with steam regulator in MAX position until Power Indicator Light goes off. Unplug from the mains socket and allow to cool. Clean the plate with a dry cloth as traces of moisture could mark it.

Cleaning and Maintenance:

Before cleaning, remove the plug from the socket and allow the iron to cool down sufficiently.

1. Wipe off the soleplate with a damp cloth and a non-abrasive (liquid) cleaner.
2. If the fiber is adhered to the soleplate, use a damp cloth with vinegar to wipe off the soleplate.
3. Never use strong acid or alkali in order to avoid damaging the soleplate.
4. If the scale blocks the steam hole, please remove the scale with toothpick; do not damage the surface of soleplate.
5. Stand the iron on its end and let it cool down sufficiently, and meantime pour any remaining water out of the box, set the steam regulator to position "0".

Simple Repair Methods:

Failure	Possible reasons	Measurement
Not enough heat or too heat	Rotate thermostat dial button improperly	Correct thermostat dial button in position
No steam produces	Check if the thermostat dial has been set towards the steam range	Adjust the regulator towards the steam range
	Check if the steam regulator has been set towards the steam position	Set steam regulator towards the steam range
Leaking water from soleplate	No or too little water in box	Fill water into the box
	Set the thermostat dial out of steam range	Set the thermostat dial as per steam range
	The heat is still not enough	Open steam button only after the indicator light goes off
Little steam	The water is over than max position	Pour out the remaining water
	Check if the steam regulator is in proper location	Set the steam regulator to the proper location
	Steam hole or box is blocked	Clean hole with distilled water
No spraying	Too little water in the box	Fill water into the box
	No enough pressure or air inside	Press the spray nozzle by hand, and push the spray button several times continuously
	No or little water in the box	Fill water into the box

After the above-mentioned methods to repair iron, if it still cannot come to work normally, please sent to our special repair agent for repair.



**STEAM IRON
INSTRUCTION MANUAL
CM17FI-4**



Please read these instructions for use and have a good look at the illustration before using the appliance

Specifications:

Model: CM17FI-4

Functions: Dry Ironing, Spraying, Steam, Vertical Steam, Burst of Steam

Rated parameter: 220V-60Hz **1280W**

Type of Fabric: Nylon, Silk, Wool, Cotton, Linen

Safety Instructions:


When using your iron, basic safety precautions should always be followed:

1. Make sure the power used corresponds with the one indicated on the rating label.
2. Use the iron only for needed use as described in the instruction manual.
3. Close supervision is necessary when any appliance is used near children. Do not leave iron unattended while connected or on an ironing board. Burns can occur from touching hot metal parts, hot water or steam.
4. Keep the iron out of reach of children.
5. Unplug the iron from the mains electrical supply before:
 - 1) Cleaning
 - 2) Filling with water or emptying the water tank
 - 3) Immediately after use
6. Never operate the iron with damaged power cord or plug, or after it has fallen or been damaged in any way. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair.
7. Do not let cord touch hot surfaces.
8. To protect against a risk of electric hazards, do not immerse the iron in water or any other liquid.
9. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
10. The iron must not be left unattended while it is connected to the mains supply.
11. The plug must be removed from the sock-outlet before the water reservoir is filled with water.
12. The iron must be used and rested on a stable surface.
13. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
14. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

Cautions of the first use:

1. The iron been greased, and as a result, the iron may slightly smoke when switched on for the first time. After a short while, this will cease.
2. Before using for the first time, remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
3. Keep the soleplate smooth, avoid hard contact with metal objects (such as clothes rack, button and slide fastener)
4. Pure woolen fabrics (100% wool) may be pressed with the iron set to a steam position. Preferably set the steam regulator to strong position, and use a dry pressing cloth.

Component Name:

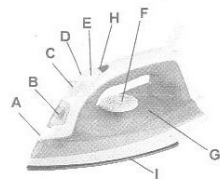

- A---Spray Nozzle
- B---Water Filling Cover
- C---Steam Regulator
- D---Burst Steam Button
- E---Spray Button
- F---Thermostat Dial
- G---Water Reservoir
- H---Power Indicator Light
- I---Soleplate

Filling With Water:

1. Set the steam regulator to 0 (=no steam) (only for steam iron).
2. Hold the iron by hand and slant the iron with 45° down.
3. Fill the water in the box through the Water-Filling Hole, if the water is too hard, it is advisable to use distilled water, do not put the chemically water in the water reservoir.
4. Wipe off the water over the box; pour out the remaining water after use.

Dry Ironing:

1. Before running the iron, please classify the clothes as per its washing label, as it will be quicker for the iron to heat up than to cool, the clothes (such as synthetic fabric, silk etc) with lower ironing temperature shall be ironed firstly, and then iron the clothes (such as wool, cotton and linen etc) with higher temperature.
2. Stand the iron on its end, and turn the thermostat dial to the MIN position.
3. Plug in the iron and select the temperature by turning the thermostat dial. If there is water in the reservoir, turn the steam regulator to OFF position. Wait until the indicator light goes off showing that the required temperature had been reached.

Steam Ironing:

1. Fill water in the iron as per the water-filling methods.
2. Plug the appliance in the socket.
3. If only set thermostat dial to MAX position as per the temperature indicator, steam iron will be available, otherwise water may leak from the soleplate.
4. It indicates that the temperature has been ready until the indicator light goes off.
5. Set the steam regulator correctly; increase the steam output by rotating the steam regulator anticlockwise, otherwise decrease.

Caution: Synthetic Fabric, Nylon, Synthetic Silk and Silk cannot use the steam iron, otherwise it will damage the finish of surface.

Burst of Steam:

This function will be able to provide more steam to remove stubborn creases.

1. Set the thermostat dial button to MAX until the indicator light goes off.
2. Release the steam by pressing the steam button.
3. Wait for several minutes and let the steam penetrate through the fabric, and then release more steam through pressing this buttons again.

Note:

1. There should be 3-5 seconds rest between two times of pressing Steam Button in order to obtain the best steaming result.
2. Fill the water to the MAX position before using this function.
3. In order to prevent the water leaking from soleplate, please do not press the steam button continuously with more than 5 seconds.

Spraying Methods:

1. Fill the water in the iron as per water-filling methods.
2. Press water spray button.
3. Note: No matter what steam ironing of dry ironing is, spray will always be available in any case.

Type of Fabric and Thermostat Dial Form:

Caution:  Please note that  on the label means that this article may not ironed.