


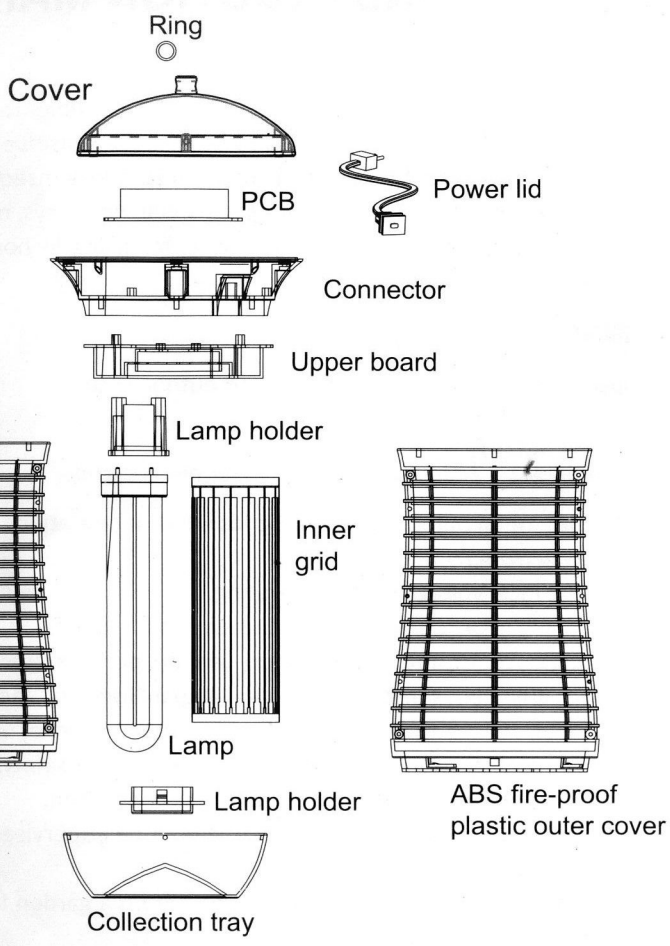
# INSTRUCTION MANUAL

## Model: CM16IK-23 Bug Zapper

The Electronic Insect Killer utilizes the black light (ultra-violet rays) of the wave length, which is proved to be the most effective lure for light sensitive flying insects, such as flies, moths, mosquitoes, and other flying insects. These insects are electrocuted by the high voltage inner grid. No chemicals, no smell, no sprays, no mess, pollution free and harmless to humans and pets. It is ideal for using in houses, office, factories, food outlets, hospitals and other places.

## WARNINGS:

1. Household use only. Suit for indoor and outdoor use.
2. High voltage!  Do not touch the inner electric grids.
3. Never put metal objects inside the grids while in operation.
4. Keep away from flammables.
5. Check the local voltage before operating.
6. Hang or ceiling on a place where children cannot reach.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Keep the appliance and its cord out of reach of children.
9. Children cannot play with it. Children should be supervised to ensure that they do not play with the appliance.
10. An electric shock hazard may exist if water from a garden hose is directed at the insect killer.
11. When using extension cords, keep the socket-outlet away from moisture and avoid damage to the cord.
12. The appliance is not to be used in locations where flammable vapor or explosive dust is likely to exist.
13. The appliance can be used as Pendant type or Pedestal type. When as pendant type, only use the attached chain and hang on the location which at least 4k bearing supports. When as pedestal type, only place on flat surface.
14. The lamp in this appliance cannot be replaced. Scrap the appliance when the lamp ceases to operate.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Unplug the appliance before cleaning. Clean the plastic enclosure/ grille with dry clothes empty the collection tray every week or when need.



For after-sales service:  
Landline-(632)442-3866;412-6155;413-8819;442-3856;448-7674  
Mobile-0923-5345681;0917-3079188;0920-9746874  
Email at [sales\\_mktg@colentco.com](mailto:sales_mktg@colentco.com) or [iwata@colentco.com](mailto:iwata@colentco.com)[1]  
or [iwata2@colentco.com](mailto:iwata2@colentco.com)[1] or [iwata3@colentco.com](mailto:iwata3@colentco.com)[1]  
Web- [www.colentco.com](http://www.colentco.com)