

B. Drain the water tank

Remove the drain plug, tilt the cooler and drain the water from the tank.

#### ● Troubleshooting

| Problem:                       | Cause/Remedy:  |
|--------------------------------|--|
| 1. Cooler fails to work at all | 1.1 Check that the unit is plugged properly.                             |
|                                | 1.2 Check the POWER switch, push it to "ON".                             |
| 2. Cooler does not pump water  | 2.1 Pump is not activated. Push the PUMP switch to "ON".                 |
|                                | 2.2 Water level is low. Fill with water and make sure pump is activated. |
|                                | 2.3 Pump may be defective. Replace pump.                                 |
| 3. Fan does not operate        | 3.1 Check that unit is plugged properly.                                 |
|                                | 3.2 Check the POWER switch, push it to "ON".                             |
|                                | 3.3 If connected to a GFCI outlet, check if it is tripped.               |
| 4. Louver does not operate     | 4.1 Louver does not move. Louver switch position to "ON".                |
| 5. Water leakage               | 5.1 Check the cap of the drain assembly, make sure it tightened.         |

For after-sales service:

Berton's Place #46 Sta. Rosa Street Barangay Manresa Quezon City  
Tel Nos. 8442-3856; 8442-3866; 8282-5049, 8282-5098

 
Email: sales\_mktg@colentco.com/iwata@colentco.com \*Website: www.colentco.com



## AIR COOLER

### INSTRUCTION MANUAL

#### MODEL: Aircool Z24

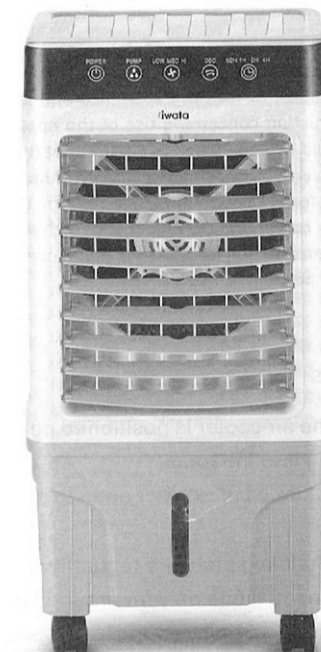

#### INTRODUCTION

- Thank you for purchasing our air cooler.
- Each unit has been manufactured to ensure safety and reliability.
- Before initial use, read the instructions carefully and keep it for future reference.

## ● PERFORMANCE PARAMETERS

| Model       | Rating Power | Power | Water Tank Capacity |
|-------------|--------------|-------|---------------------|
| Aircool Z24 | 220V~ 60Hz   | 80W   | 20L                 |

## ● SAFETY RULES

 
IN ORDER TO REDUCE THE POSSIBILITY OF FIRES, ELECTRIC SHOCK OR PERSONAL INJURY

1. Unit must be in the OFF position and Unplugged from power receptacle when performing any maintenance.
2. To reduce the risk of electric shock, plug unit into a properly grounded receptacle.
3. To reduce the risk of electric shock, install only on a protected circuit.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. Do not operate any cooler with a damaged cord or plug. Discard the cooler or return to an authorized service facility for examination and/or repair.
6. Do not run cord under carpeting. Do not Cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

## ● LOCATION

### KEY OPERATIONAL POINTS

1. Please ensure that the air cooler is positioned near windows/doors to allow outside air to circulate into the room.
2. It is best to leave another window/door open to allow the air inside the room to circulate outwards.
3. Ensure that the filter/cooling pads are regularly cleaned.
4. Run your air cooler on fan mode only for around 30 minutes to allow cooling pad to dry before storing the unit.
5. Always drain the water tank, clean the cooling pads & wipe the louvers, blades and whole unit clean before storing your air cooler for an extended period of time.

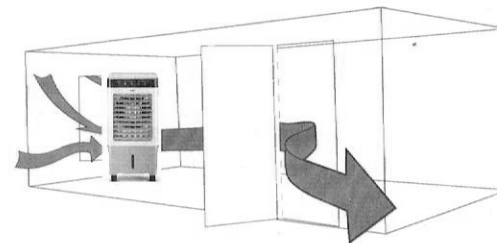

## ● CASTERS ASSEMBLY

Locate & install the 4 wheels on the bottom of the water tank using screws provided.

 
## ● TO OPERATE THE COOLER

### A. Filling water

1. Open water filler door.
2. Fill cooler with water.
3. Watch water level indicator and stop adding water as "full" graphic enters indicator window.

### B. Connect to power point

Control panel:

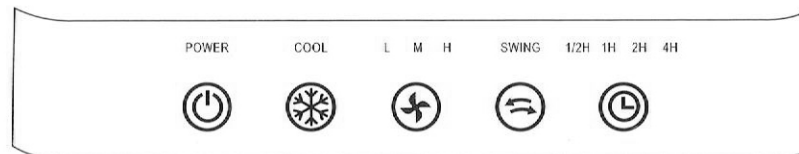

- Turn on the "POWER" button
- Adjust "SPEED" accordingly (Low, Medium or High)
- Set "TIMER" accordingly
- Turn "COOL" function on
- Activate "SWING" function as needed

## ● COOLER MAINTENANCE

**(DISCONNECT FROM THE POWER SOCKET!)**

### A. Disassemble the back panel

- Uninstall the screws in the back panel first, then pull the back panel up.
- Pull out the bottom of the back panel then take it down.