

9. Do not pull out the cable to unplug. Do not turn ON and OFF the appliance by connecting it and disconnecting it from the source of electricity.
 10. Do not clean the outside of the appliance with water to avoid electric shock. Clean it with a soft cloth.
 11. If you are not using the appliance for a long period of time or during the night, you can turn it OFF to save energy.
 12. Do not attempt to change the power cord by yourself if it has any damage. Contact the manufacturer or specialized service personnel.
 13. If the power cable suffers any damage, contact the manufacturer, his service representative or qualified personnel.
 14. The equipment must be installed keeping easy access to the electrical plug.
 15. **WARNING** - to avoid the risks of an unstable installation, the equipment must be installed following its instructions.
 16. **WARNING** - keep the ventilation openings at the back of the appliance uncovered and unobstructed.
 17. **NOTICE** - do not damage the refrigerant circuit.
 18. The environmental temperature for this appliance should be between 18° C and 38 ° C.
 19. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance
- This appliance is intended to be used in household and similar applications such as
- staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications
20. Do not place other appliances inside this equipment unless those are recommended by the manufacturer.
 21. Do not store explosive substances such as spray cans inside this appliance.

What to do in case of problems:

First turn off the water dispenser and disconnect it from the source of electricity.

Problem	Possible cause	How to solve
Lights do not lit	1. Appliance is not connected to the electrical system 2. The switch is not ON	1. Make sure that the switch is ON and the plug is connected 2. Turn the switch into ON or turn the timer
Leaking	1. The water container is broken 2. The water pipe is broken 3. The faucet is damaged	1. Replace the water container 2. Replace the water pipe 3. Replace the faucet
Not heating	1. Heating switch is damaged or does not make contact 2. The heating tank is burnt 3. The electrical connection is loose	1. Replace the switch and check the connections 2. Replace heating tank 3. Repair connections
Not cooling	1. Cooling switch is damaged or does not make contact 2. The electrical connection is loose	1. Replace the switch and check the connections 2. Repair connections

This kind of product is used in household and similar environment.



Water Dispenser

CM21TWD-3

OPERATION MANUAL


Please read the instruction manual prior to initial use and keep it for future reference.

Landlines.: 8282-5049; 8282-5098
 Mobile Nos. 0908-8908597; 0917-3079188
 Email: sales_mktg@colentco.com / iwata@colentco.com
 Website: www.colentco.com

Character

- 1.Modern design.
- 2.Energy-saving, low noise, resistant structure and great stability. Suitable for use in homes, hotels, schools, etc.
- 3.The plastic parts of this product use high quality and durable plastic.
- 4.Double security system, "temperature control " and "heating protection". Hot water temperature is always between 80 ° C and 95 ° C, enough to make coffee or tea, or other instant food.
- 5.The water dispenser's cooling system is durable and suitable for use during the summer.
- 6.This product can be used with bottled water or a water purifier.

Parts name

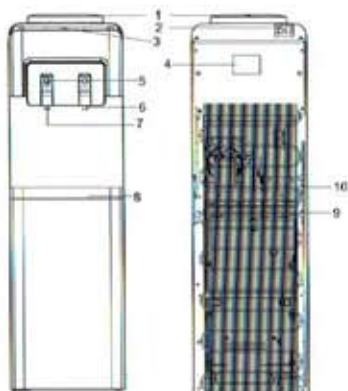

NO.	NAME	NO.	NAME
1	Bottle Seat	6	Cold Water Faucet
2	Power Switch	7	Hot Water Faucet
3	Indicator Lights	8	Drip Tray
4	Information Plate	9	Drain Plug
5	Safety Push Button	10	Electric Power Cord

Note: The graphic is for reference only. The current device may have differences with the graphic.


Operation process

- 1.Insert the bottle vertically on the seat and press the water faucets until water flows out of the red hot water faucet.
- 2.Insert the power plug to the wall socket and turn the electric switches to ON position to start the appliance. DO NOT MOVE BOTH SWITCHES AT THE TIME. Cooling and heating indicator lights should light up. The appliance is designed to provide hot or cold water whenever you need it. It will automatically turn on and off when the water reaches the desired temperatures.

Technical Information

Model	CM21TWD-3
Voltage - Frequency	230V~ 60Hz
Heating power	500W
Cooling power	85W
Water Heating capacity	5. 0L/h
Water Cooling capacity	2. 0L/h
Prevention of electric shock	Type I

Circuit Illustration

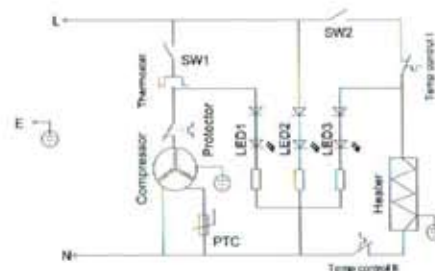

Note: If technical data or the circuit graphic change, the information sheet may not reflect those changes.

Attention

- 1.Make sure to have poured water from the hot water faucet before plugging and switching the appliance ON to heat. If the dispenser is turned ON with an empty water tank, it can be damaged.
- 2.When you are ready to move the water cooler, do not tilt more than 45° to avoid damage to the compressor.
- 3.Always install the dispenser indoors, on a flat surface and at a distance no less than 15 cm from the back wall.
- 4.Keep this appliance away from high temperatures and in a dry and ventilated place. Never install it in the open air or under rain or direct sunlight.
- 5.Children should not use the red hot water tap.
- 6.If the appliance is not going to be used for a long period of time, unplug it and drain all water in its interior.
- 7.Before the first use and after a long period of not using it, the water tank and water pipes should be cleaned well. If possible, they should be disinfected and disinfect, and the first heated water must be discarded (switch the heating switch to OFF while draining the system).
- 8.Wash and disinfect the system every 3-6 months with a suitable cleaner and according to its instructions for use.