

120 mm

80 mm




User Manual

Please read these instructions carefully before use and keep them handy for future reference.

USB Mini Food Processor

FP106

Warning: Be careful of sharp blades to avoid any injury!

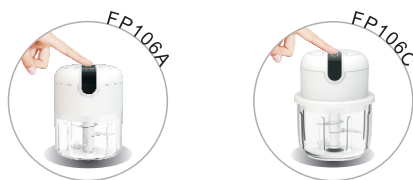

Attention

1. This appliance is for personal or household use ONLY.
2. Children being supervised NOT to play with the appliance.
3. This appliance is NOT intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Do NOT overload the appliance.
5. This appliance can NOT be used to process hard food, such as coffee beans, soybeans, gelatin, rice, ice cubes or frozen food.
6. Do NOT operate CONTINUOUSLY for more than 30 seconds.
7. Do NOT operate CONTINUALLY for more than 2 minutes.
After such a cycle, the appliance must be cooled for at least 30 minutes for a good lifespan.
8. Do NOT use abrasive or corrosive cleaning agents for cleaning.
9. Do NOT rinse the main unit directly with water.

Operation

1. Before first use, do plug and fully charge the unit. the LED indicator turns red when charging while off after charging done; Clean the cutter, bowl, and splash guard(lid) well.
2. Insert the cutter onto the centering shaft in the bowl (make sure that the cutter is installed in place to rotate freely). Be careful when handling the cutter!
3. Add food pieces into the bowl (below the Max. line), and insert the lid, then put the main unit onto lid. Be sure that the main unit and lid fits well by wave-shaped fixing structure.
4. Press-Hold the switch to start processing (The cutter may be jammed if the appliance is over loaded. Do reduce the amount of the food then go on).
5. Release the switch in about 15 seconds after one first processing (rough processing).
6. Continue another round of processing (fine processing) for NO MORE THAN 15 seconds, and your food preparation done!

Maintenance and Storage

1. Clean the splash guard, cutter, and bowl in clean water (better to be warm) with a cleaning pad, immediately after use.
2. Soft detergent can be added into cleaning water. The cutter is very sharp and must NOT be touched by hands. To avoid injuries, the cleaning water shall ALWAYS be noticeably clear, so that the cutter can be seen during the cleaning process.
4. Use a soft warm cloth to wipe clean the outside of the main unit.
5. After cleaning, dry out all the parts, reassemble and store the appliance in a dry place.
6. The appliance is Li-Ion battery operated and it must be maintained/ charged after every 3 months of none-use.

Specifications

Voltage : 5V DC
Power : 30W
Battery : 1200mAh Li-Ion

Landlines: 8282-5049; 8282-5098
Mobile Nos. 0908-8908597; 0917-3079188
Email: sales_mktg@colentco.com / iwata@colentco.com
Website: www.colentco.com

LEARN MORE

