

• **COOLER MAINTENANCE**
(DISCONNECT FROM THE POWER SOCKET)

A. Disassemble the back panel

- a. Remove the screws in the back panel first, then pull the back panel up.
- b. Pull out the bottom of the back panel then take it down.

B. Drain the water tank

Remove drain plug and clear all water out from the tank by slightly tilting the unit to it's side.

• **TROUBLESHOOTING GUIDE**

Problem	Cause / Remedy:
1. No Power	1.1 Check that the unit is unplugged properly 1.2 Check the POWER switch, push it to "ON"
2. COOL function not working	2.1 Pump is not activated. Push the PUMP switch to "ON" 2.2 Water level is low. Fill with water and make sure pump is activated. 2.3 Pump may be defective. Replace pump.
3. Fan does not operate	3.1 Check that unit is plugged properly. 3.2 Check the POWER switch, push it to "ON"
4. Louver does not operate	4.1 Switch SWING function "ON"

For after-sales service:

Berton's Place #46 Sta. Rosa Street Barangay Manresa Quezon City,
Philippines.
Tel Nos. 8282-5049; 8282-5098 Mobile Nos. : 0908-8908597; 0917-3079188
Email: sales_mktg@colentco.com/tornadocmpi@gmail.com

 
Website: www.colentco.com



LAKAS AT PRESYONG PANALO

AIR COOLER
INSTRUCTION MANUAL

MODEL: Blaster LT-21A

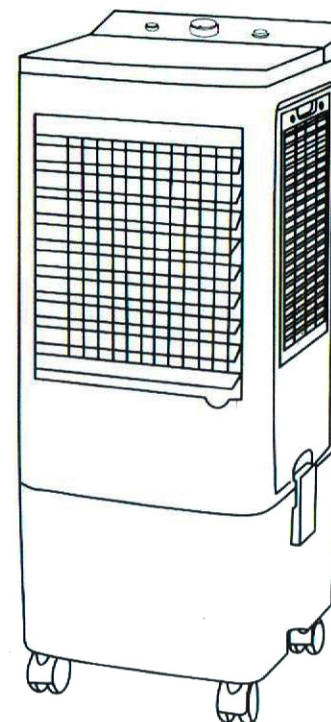

INTRODUCTION

- Thank you for purchasing our air cooler.
- Each unit has been manufactured to ensure safety and reliability.
- Read the instructions carefully prior to initial use and keep it for future reference.

• SPECIFICATIONS


Model	Rating Power	Power	Water tank capacity
Blaster LT-21A	220V~ 60Hz	80W	20L

• GUIDELINES

IN ORDER TO REDUCE THE POSSIBILITY OF FIRES, ELECTRIC SHOCK OR INJURY.

- Unit must be in the OFF position and unplugged from power receptacle when performing any maintenance.
- To reduce the risk of electric shock, plug unit into a properly grounded receptacle.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any air cooler with a damaged cord or plug. Discontinue using the cooler or return to an authorized service facility for examination or repair.
- Do not run cord under carpeting. Do not place cord under throw rugs, runners or similar covering.

LT-21A control panel image

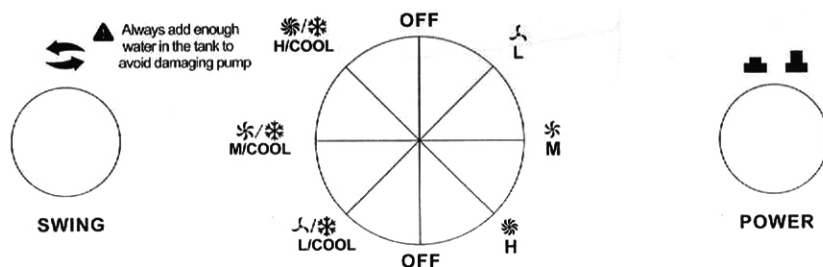

• LOCATION

KEY OPERATIONAL POINTS

- Your cooler must be positioned near an open window or door to operate effectively.
- Having a well-ventilated area/room is always best for air cooler usage.


3. Ensure the filter & cooling pads are always kept clean.

4. If storing the air cooler for a longer period:

- Drain the tank and wipe it dry.
- Clean the filter & cooling pad
- Reassemble and run on "FAN ONLY" for 30 minutes to dry out the cooling pad

• LOCATION

Having completed assembly of your cooler, position the unit with its back to an open window or door. This will allow fresh air to be drawn through the cooler and released throughout the room. Constant air change is an essential part of using air coolers and will be beneficial for your health & well-being.

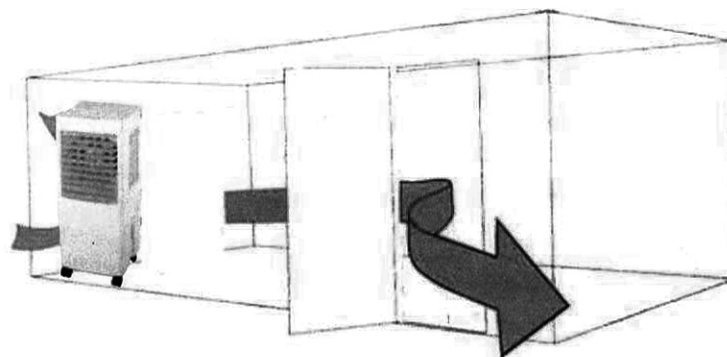

• WHEELS ASSEMBLY

Take out the 4 wheels and screws after opening the carton, install them at the bottom of the tank and move the air cooler smoothly.

• OPERATING THE AIR COOLER

A. Filling water

- Open water filler door.
- fill cooler with water.
- Watch water level indicator and stop adding water when full.

B. Connect to power outlet