


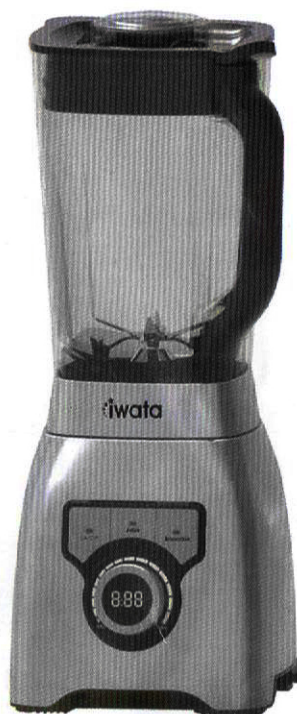

Model: PRO-BLEND LUXURY  
HEAVY DUTY COMMERCIAL BLENDER



Exclusively distributed by:  
COLENT MARKETING PHILIPPINES, INC.  
Berton's Place, #46 Sta. Rosa Street, Quezon City, Philippines 1115  
Website: [www.colentco.com](http://www.colentco.com)  
Landlines: 8282-5049; 8282-5098  
Mobile: 0923-5345681; 0917-3079188; 0920-9746874  
Email: [sales\\_mktg@colentco.com](mailto:sales_mktg@colentco.com), [iwata@colentco.com](mailto:iwata@colentco.com),  
[iwata2@colentco.com](mailto:iwata2@colentco.com) or [iwata3@colentco.com](mailto:iwata3@colentco.com)

LEARN MORE



## **READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT FOR FUTURE REFERENCE.**

### **SAFETY PRECAUTIONS**

Check that the local voltage supply matches the rated voltage of product.

1. Do not immerse this appliance (including heating jar), power cord, plug into water or other liquid to avoid fire, leakage or endanger personal safety.
2. It should be monitored when using this appliance; do not let children and people without self-care close to blender.
3. Unplug when you do not use or clean the blender. When removing the jar, make sure the motor is in static state.
4. If the power cord, plug damaged, electrical failure or other causes of product damage, please do not use it, but contact the manufacturer's after-sale service or send the product to the nearest authorized maintenance network for inspection, repair, replacement and commissioning.
5. The product should be placed on the table or flat place, do not hang the power cord on the edge of the table or table.
6. Do not use the appliance or place it close to flammable gases and electric furnaces at high temperatures.
7. Do not open the jar cover and contact the blade before the product stops running.
8. The blade is very sharp. Be careful when installing, removing and cleaning to avoid cutting by the blade.
9. Do not use accessories recommended or sold by non-manufacturer, including jars, jar covers, etc., to avoid danger.
10. Do not soak in water or other liquids for cleaning jar with electrical components.
11. Please make sure the jar cover is installed in place before the appliance runs, otherwise the appliance can not work properly.


12. This appliance is not suitable for children, disabled people, mental patients, people who are allergic to motor noise or are not familiar with the appliance. Unless the guarantor gives full supervision and guidance to the above personnel. Children are forbidden to play with this product. Children under 8 years of age are not allowed to clean and maintain the appliance to avoid danger.

13. This appliance can not be used outdoors.

14. This appliance is suitable for household and similar purposes.

15. The appliance and power cord should be stored in a safe place to avoid children pulling power cords.

## PRODUCT SPECIFICATIONS

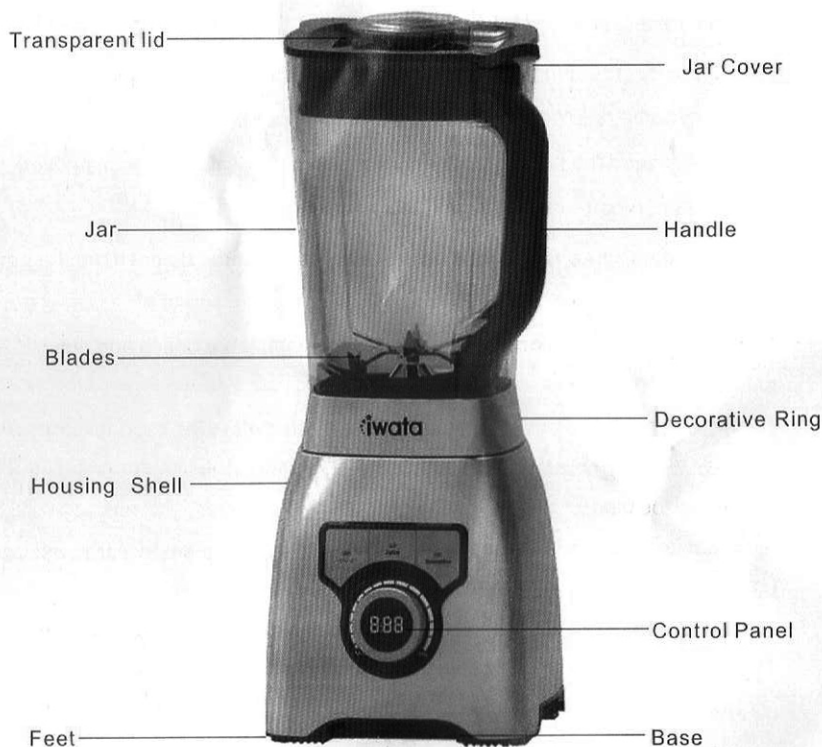

## OPERATIONAL GUIDELINES:

### 1. Operating Function Instruction

Place the jar on the base correctly, plug in, led lights of the digital tube

(displaying 8.8.8) and all other lights are on and will be off in 1.5 seconds. The

appliance will be in standby mode after pressing ON/OFF, digital tube displays 0.0.0

#### 1.1 Operating with knob

①. In standby mode, the rotary knob (360°) can be rotated clockwise and the rotating speed is increased steplessly in turn; decreasing counterclockwise, (twisting to the left, returning to standby mode), the light from the first light on the left, twisting to the second light, lights are on continuously. Twisting the whole circle, full circle lights are all on. The appliance can only work for 3 minutes one time. The buzzer sounds for three times after appliance finishes working, and full circled lights flicker for 5 seconds, the appliance comes back to standby mode.

#### 1.2 Operating with programmed function button

①. When pressing one of the two programmed function buttons, the indicator light of the selected function button will be on, the others will not, and the appliance immediately enters the selected function program work.

②. With the same function button, pressing for the first time this function starts and lights up; pressing for the second time this function cancels and lights off, the appliance returns to standby mode. (In the model of standby, the appliance stops working and all lights of programmed functions off)

③. In the working process of programmed function operation mode, the two function buttons can be freely selected, the selected function button indicator light will be on, the abandoned function button light is off, and the appliance enters the selected function program directly.

④. The working time of the two functions is countdown, the first "0" will display minute, separated by dot, the other two "0" display second.

⑤. During working or operating, pressing ON/OFF for the first time, the appliance comes back to standby mode, pressing ON/OFF for a second time, all functions are closed, the light of ON/OFF flickers. If in the mode of standby mode, pressing ON/OFF, all functions will also be closed and the appliance comes back to standby mode.

## SPECIFICATIONS

| Item No.:        | Rated Voltage | Frequency | Power | Capacity | Rated speed |
|------------------|---------------|-----------|-------|----------|-------------|
| PRO-BLEND LUXURY | 220V-240V     | 60HZ      | 1500W | 2.0L     | 25000RPM    |

## CONTROL PANEL



### Before using this appliance for the first time

Check if all accessories are complete and that the mainframe is intact. Add 1000 ML of water to the jar and clean it once or twice according to the instruction. Pour out the water.

**Warning:** The blade is very sharp, please operate carefully.

**Note:** the product has the function of power off when taking away the jar and power off when opening the jar cover. If the jar is not placed well, the appliance can not work properly.