

Problem and Causes

Symptom		Cause	Solutions
Power indicator does not illuminate	Heating plate is not hot	Not connected with power	Check the switch/ plug/ outlet fuse& cord and see whether they do work well or not
	Heating plate is hot	1 The connections inside are loose 2 The indicator is damaged	1. Join them together again 2. Replace them
Power indicator illuminate	Heating plate is not hot	1. The connections are loose 2. Electric heating tube has been burned	1. Fasten them again 2. Replace the heating tube
Cooking time is too long Or hard to cook		1 The pot has been deformed 2 Temperature not be adjusted high enough	1 Adjust the pot to ensure a full contact with the heating plate 2 Turn the switch to right side to adjust the temperature higher
Have creak sound while cooking		Caused by heating plate expand while heating	It's normal, can continue to use

For after sales service

Landline:

8442-3856,8282-5098,8282-5049,8442-3866(local 502,503,504)

Mobile:

 
 
 
09088908597,09173079188

Email:

iwata@colentco.com; iwara2@colentco.com; iwara3@colentco.com



INSTRUCTION MANUAL QUICK COOKER SERIES

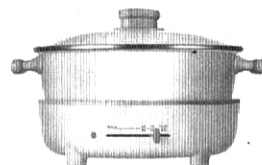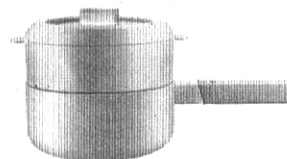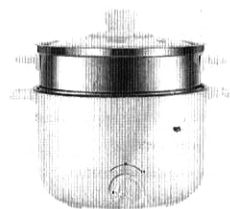

Safety instructions

- Before commissioning this device please read the instruction manual carefully
- Always remove the plug from socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs, switch off the device beforehand. Pull on the plug, not on the cable.
- In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, do so in such a way that children do not have access to the device. Take care to ensure that the cable does not hang down
- This appliance can't be used by the persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by the person who is responsible for their safe. Children should be supervised to keep away from this appliance and forbid to play with it.
- Do not repair the device by yourself, but rather consult an authorized expert.
- Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges and suchlike.
- Never use the device unsupervised. Switch off the device whenever you are not using it, even if this is only for a moment.
- Use only original accessories.
- Under no circumstances the device must be placed in water or other liquid, or come into contact with such. Do not use the device with wet or moist hands.
- Should the device become moist or wet, remove the mains plug from socket immediately. Do not reach into water.
- If the supply cord got damaged, the cord must be replaced by the manufacturer, the service agent or similar qualified person to avoid a hazard.

Function:

1. Boil water.

Put water in the pot. Please make the water not lower than the MIN mark and not higher than the MAX mark. Connect the supply. Turn the switch to the right boil side. After water boiling, turn the switch to off place and pull out plug then take the water.

2. Cook noodles/Stew food/Hot pot

Please use the above method to boil some water. After water boiling, put noodles or other food into the cooker pot. Cover the lid. After several minutes water and food will boil again.

Put some flavorings and use spoon to mix.

Then cook finished. Turn the switch to off place and pull out plug then take the food.

3. Fry food

Put some oil in pot then turn the switch to boil place. After several seconds oil will get heated. Put food into cooking pot and put some flavorings mix with food then cook finished. Turn the switch to off place and pull out plug then take the food.

Attention:

1. This appliance only can cook noodles, soup, congee and stew food. While cooking Please do not leave. This cooker can't do slow cook for some medicine or food like beans.
2. While using this cooker, Please DO not exceed 40minutes. At least stop around 5minute then use again. All food can cook well within 15-20minutes. After the cooker became cold then use again. Proper use can increase the service life.
3. To ensure safety, please turn off the switch and pull out the plug when finish cooking. After cooker getting cold then clean it.