



Model:PRO-BLEND SUPREME
HEAVY DUTY COMMERCIAL BLENDER



Exclusively distributed by:

COLENT MARKETING PHILIPPINES, INC.

Berton's Place, #46 Sta. Rosa Street, Quezon City, Philippines 1115

Website: www.colentco.com

Landlines: 8282-5049; 8282-5098

Mobile: 0923-5345681; 0917-3079188; 0920-9746874

Email: sales_mktg@colentco.com, iwata@colentco.com,
iwata2@colentco.com or iwata3@colentco.com

LEARN MORE



READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT FOR FUTURE REFERENCE.

SAFETY PRECAUTIONS

Check that the local voltage supply matches the rated voltage of product.

1. Do not immerse this appliance (including heating jar), power cord, plug into water or other liquid to avoid fire, leakage or endanger personal safety.
2. It should be monitored when using this appliance; do not let children and people without self-care close to blender.
3. Unplug when you do not use or clean the blender. When removing the jar, make sure the motor in static state.
4. If the power cord, plug damaged, electrical failure or other causes of product damage, please do not use it, but contact the manufacturer's after-sale service or send the product to the nearest authorized maintenance network for inspection, repair, replacement and commissioning.
5. The product should be placed on the table or flat place, do not hang the power cord on the edge of the table or table.
6. Do not use the appliance or place it close to flammable gases and electric furnaces at high temperatures.
7. Do not open the jar cover and contact the blade before the product stops running.
8. The blade is very sharp. Be careful when installing, removing and cleaning to avoid cutting by the blade.
9. Do not use accessories recommended or sold by non-manufacturer, including jars, jar covers, etc., to avoid danger.
10. Do not soak in water or other liquids for cleaning jar with electrical components.
11. Please make sure the jar cover is installed in place before the appliance runs, otherwise the appliance can not work properly.


12. This appliance is not suitable for children, disabled people, mental patients, people who are allergic to motor noise or are not familiar with the appliance. Unless the guarantor gives full supervision and guidance to the above personnel. Children are forbidden to play with this product. Children under 8 years of age are not allowed to clean and maintain the appliance to avoid danger.

13. This appliance can not be used outdoors.

14. This appliance is suitable for household and similar purposes.

15. The appliance and power cord should be stored in a safe place to avoid children pulling power cords.


PRODUCT SPECIFICATIONS

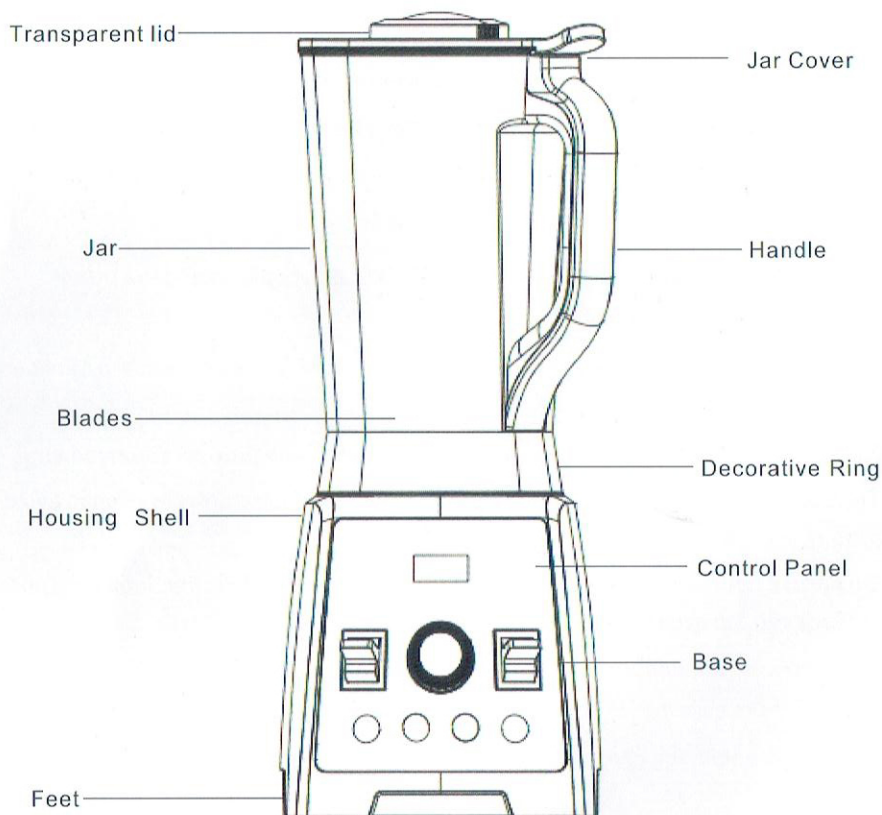

SPECIFICATIONS

Item No.:	Rated Voltage	Frequency	Power	Capacity	Rated speed
PRO-BLEND SUPREME	220V-240V	60HZ	1500W	2.0L	25000RPM

CONTROL PANEL

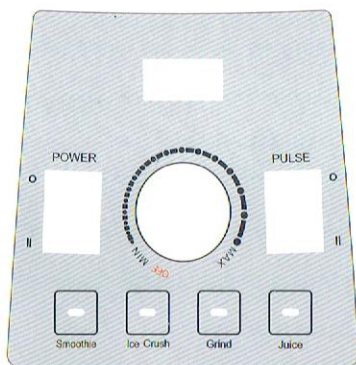

Before using this appliance for the first time

Check if all accessories are complete and that the mainframe is intact. Add 1000 ML of water to the jar and clean it once or twice according to the instruction. Pour out the water.

Warning: The blade is very sharp, please operate carefully.

Note: the product has the function of power off when taking away the jar and power off when opening the jar cover. If the jar is not placed well, the appliance can not work properly.

OPERATIONAL GUIDELINES:

1. Please put the product on a flat table and make sure the power cord is plugged into the power outlet.

2. Make sure the jar is covered and placed correctly on the base.

3. The first mode of operation: operating by speed control knob.

3.1 In standby mode, the rotary knob (360°) can be rotated clockwise and the rotating speed is increased steplessly in turn; decreasing counterclockwise, (twisting to the left, returning to standby mode), the light from the first light on the left, twisting to the second light, lights are on continuously. Twisting the whole circle, all lights are on. The maximum working time is 3 minutes. After the work is finished, the buzzer rings three times, the whole ring lights flicker for 5 seconds, and return to standby.

3.2 You can press the pulse switch during work.

4. The second mode of operation: Four Preset Function

4.1 When any of the four preset function buttons is selected, the selected function indicator lights flicker, the other indicator lights are extinguished, and the appliance immediately enters the selected program to work.

4.2 In the four preset function mode, repeat pressing the selected function button, the selected program is canceled, and the appliance returns to standby mode. (Standby mode: appliance stops working, four preset function indicator lights all on)

4.3 In the four preset function mode, you can freely choose any other function button. After re-selection, the newly selected function indicator lights flicker, other indicator lights go out, the appliance directly into the selected program work, the lights are always on.

5. After the work is finished, unplug the power cord, pour out the food and add seasoning according to your personal preference.

6. Clean the jar in time.

Note: The speed is high, when the appliance is in the maximum speed mode, do not use the max. speed for a long time. Be careful!