



# Water Dispenser User Manual

CM22WDT-ICE


Please read the instruction manual prior to initial use and keep it  
for future reference.

Landlines.: 8282-5049; 8282-5098  
Mobile Nos. 0908-8908597; 0917-3079188  
Email: [sales\\_mktg@colentco.com](mailto:sales_mktg@colentco.com) / [iwata@colentco.com](mailto:iwata@colentco.com)  
Website: [www.colentco.com](http://www.colentco.com)


## IMPORTANT SAFETY INSTRUCTIONS

when using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.

1. Do not let hot water touch bare skin. Keep combustible material such as furniture, bedding, pillows, clothes, and/or papers away from the back of the unit.
2. Do not operate this, or any other appliance, with a damaged power cord. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the outlet.
3. Do not run the power cord over carpeting or other heat insulations. Do not cover the cord. Keep cord away from high traffic areas, and do not submerge in water.
4. We do not recommend the use of extension cord as it may overheat and cause a risk of fire.
5. Exercise caution and use reasonable supervision when the appliance is used by or near children.
6. Do not use your water dispenser outdoors. Place the water dispenser away from direct sunlight and make sure that there is at least 4 inches (10cm) of space between the back of your unit and wall. Keep a minimum of 2 inches (5cm) on each side of your unit free.
7. Do not use this product to dispense anything other than water.
8. To avoid a hazard due to instability of the appliance, it must be placed on even and flat surface.
9. If the supply cord is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
10. This water cooler must be positioned so that the plug is accessible.
11. Disconnect the plug from the outlet when not in use.
12. Remove power plug or disconnect from the main power source before servicing the appliance.

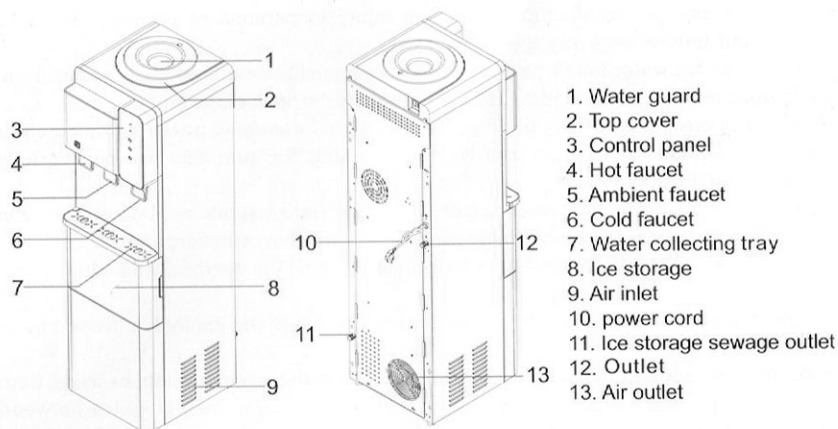

## Control Panel

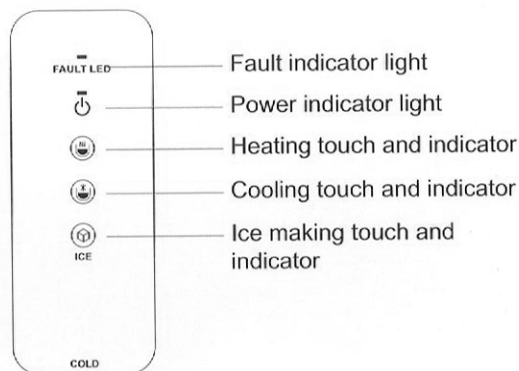

## Operating instructions

### Standby

After the machine is powered on, the buzzer will beep once, the power indicator will be on, and the machine will enter standby

### Hot water function

Press the heating touch, the buzzer will beep once, turn on the hot water function, and the hot water indicator will flash; when the water temperature reaches the set requirement, the hot water indicator will be on; if you need to turn off the hot water function, press the heating touch again, the hot water indicator will go out, and the hot water function will be turned off.

### Cold water function

Press the cooling touch, the buzzer will beep once, turn on the cold water function, and the cold water indicator will flash; when the water temperature reaches the set requirement, the cold water indicator will be on; if you need to turn off the cold water function, press the cooling touch again, the cold water indicator will go out, and the cold water function will be turned off.

### Ice-making function

Press the ice-making touch, the buzzer will beep once, the ice-making indicator flashes, the ice making function is on, and the ice-making time is about 10 minutes per cycle. When the ice-making indicator is always on, it means the refrigerator is full, ice making is suspended; remove the ice cubes in the box, and the machine restarts the ice-making function; if you need to turn off the ice-making function, press the ice-making touch, the ice-making indicator will go out and the ice-making function will be turned off.

MODEL	CM22WDT-ICE
CLIMATE	ST
VOLTAGE/FREQUENCY	230V ~ 60Hz
HEATING POWER	500W
ICE MAKING/COOLING WATER CURRENT	1.0A
DEICING CURRENT	1.1A
HEATING CAPACITY	≥90℃ 5L/h
COOLING CAPACITY	≤10℃ 3L/h
ICE CAPACITY	13kg/24h
REFRIGERANT/VOLUME	R134a/72g
NET WEIGHT	18kg
TEST	WATER TEMP 25℃ , ENVIRONMENT TEMP 25℃

