



AIRCOOL Z28

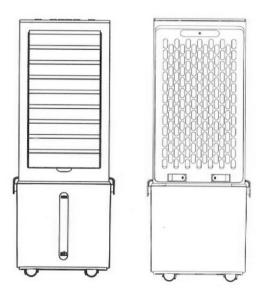

Thank you for purchasing our iwata air cooler.

Please read this manual prior to initial use and keep it for future reference.

Control Panel

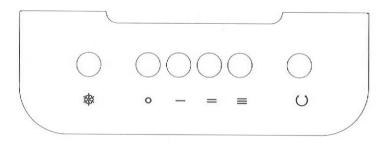

ON/OFF button

Press the " "button to turn the device off/on.

SPEED button

After plugging the air cooler, press the — -- = button to select low, medium or high speed.

COOL button

Press this " button after adding water and ice in the tank.

Press this button again to turn cool function OFF.

DO NOT activate this function without water in the tank.

Swing button

Press the " " button and the blades will start swinging left and right, Press this button again to turn this function off.

Warning: Do not move the unit when "COOL" function is in operation as water may spill on the floor or leak into electrical components and may damage the unit or cause an electrical hazard.

Water Pump, latch & water pump screw installation instruction

- Locate the water pump, water pump screw and latch from the accessories. Install all components as per Figure 1 and tighter the screw thoroughly in a clockwise motion.
- 2. See Figure 2 for water pump screw locking position
- 3. Install the water pump on the allocated slot. Refer to Figure 3
- Install the water pump screw to lock the water pump in position. Refer Figure 4

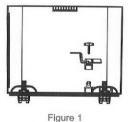


Figure 2



 


Figure 3

Figure 4


How to add water in the tank (refer to below images)

- 1. First lift up the 2 side connectors on the water tank and then separate the whole body from the water tank. Add water to the tank or use a container to add water and then re-install afterwards.
- 2. You can also add water from the upper water tank be careful not to add large volume of water too fast and causing the water to overflow to the external electrical components of the upper water tank which can damage the unit. Please observe the water level when adding water.

- The water level must be less than "max."
- The water level must be more than "min." if using the cool function.

Warning:

The water level in tank must be less than "MAX" if using ice packs.

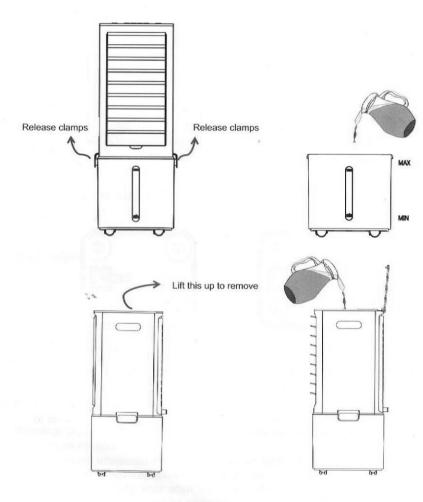


How to use ice packs

Ice packs can help cool down the surrounding temperature.

- Put ice packs the freezer after adding water.
- Dismantle the water tank and put the frozen ice packs into the water tank.
- You can also put the ice pack on the upper water tank

IDENTIFICATION OF PARTS

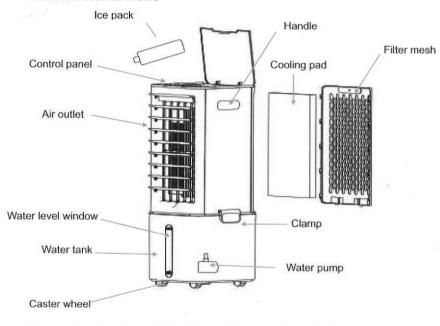

HOW TO REMOVE THE FILTER MESH, COOLING PAD AND COOLING PAD

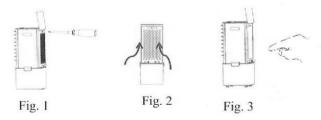


Fig.1. Use a screwdriver to remove the fixing screw of the air inlet filter mesh.

Fig 2. Slide the filter mesh up, remove the clamps and remove the filter mesh and cooling pad.

CLEANING THE AIR FILTER MESH

 Unplug the unit and remove the filter mesh. Use tap water and soft brush to clean and let it dry before reinstalling.

CLEANING THE COOLING PAD

Unplug the unit and remove the cooling pad.
 use tap water and soft brush to clean it and let it dry before reinstalling

Important: In order to avoid leak, the cooling pad must be re-installed properly.

CLEANING THE WATER TANK

 Unplug the unit and remove the lower water tank. Use a soft & damp cloth, water with a little liquid soap / mild detergent to thoroughly clean the wall of the water tank. Allow to dry before reinstalling

CLEANING THE HOUSING OF THE UNIT

Wipe off the dust using a soft cloth.

Important: Always unplug the unit when cleaning or servicing.

For after-sales service:

Berton's Place #46 Sta. Rosa Street Barangay Manresa Quezon City
Tel Nos. 8282-5049; 8282-5098 Mobile Nos. : 0908-8908597; 0917-3079188
Email: sales_mktg@colentco.com/iwata@colentco.com *Website: www.colentco.com

