 


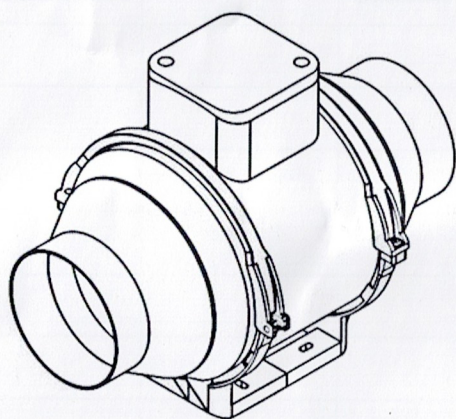

MIXED FLOW DUCT FAN INSTRUCTION MANUAL

FOR PRODUCT PURCHASE:



Berton's Place #46 Sta. Rosa St. Barangay Manresa Quezon City, Philippines.
Tel Nos. 8442-3856; 8442-3866; 3448-7674; 3412-6155; 3413-9503; 8282-5049; 8282-5098
Email: iwata@colentco.com, iwata2@colentco.com, Website: www.colentco.com
lwata3@colentco.com, sales_mktg@colentco.com



Suite 300 Del Monte Mansion Building Del Monte Avenue corner
210 Speaker Perez St., Quezon City, Philippines
Tel Nos: 8742-8139 / 8742-8140 / 8742-1526 / 8740-3815
Mobile No.: 0917-5413633 Email: diversifiedcolentcdpi@gmail.com
Website: www.colent-iwata.com

FOR AFTER SALES SERVICE:

 


HELP SQUAD SERVICES, INC.
297 D. Tuazon Ave., Brgy. San Jose, Quezon City
Phone Nos.: 0908-8908597 (Smart) / 0917-1042611 (Globe) 0917-1082201 (Globe)
Email: helpssquadservices@gmail.com / sales_mktg@colentco.com


Product Descriptions

DPT Mixed Flow Duct Fan series is a new product developed by our company on the basis of using advanced technologies abroad, components of the product adopt mode molding; the impeller adopts multi-vane centrifugation design, combining with efficient and smooth air passage, to achieve the effects of high pressure; the complete machine's advantage features include: nice appearance, energy saving, low noise, large air volume, light weight and stable operation etc. The machine can effectively regulate and control air, remove dirty air, moisture and smoke indoors etc, and which can be widely used to ventilate hotels, department stores, entertainment places and residential houses, there shall be no flammable and explosive and corrosive gases in the transportation place, the ambient temperature around the products shall be not higher than 40°C.


Installation Instruction

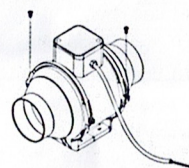

1、open the screws

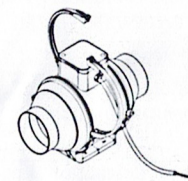 


2、open clip

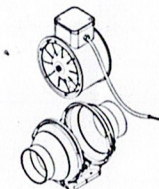 


3、take away the middle body part

 
Simple installation

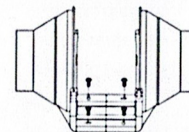


1、Fix the chassis

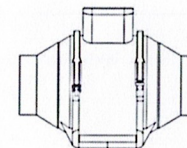 

2、Install and fix the unit body

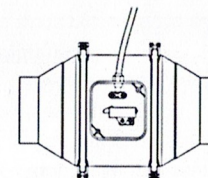 


3、wiring

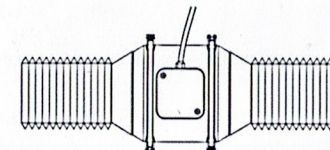 

4、duct connecting

 Notes of in installation of unit body

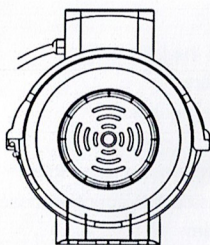

(Air outlet)

※ After fixing the base, please pay attention to the installation direction of the air outlet when installing the body.

Parameters

Model	Rated Voltage (V~)	Rated Hz	Power (W)		Air volume (m³/h)		Speed (rpm)		Noise (dB)		Static (pa)		N.W (KG)
			H	L	H	L	H	L	H	L	H	L	
MFF-100	220	60	36	31	200	170	2400	2050	32	26	150	130	1.5
MFF-150			68	44	470	420	2380	2160	42	37	230	200	2
MFF-203			124	86	730	650	2100	1870	62	54	290	260	2.5

Installation manual

In this manual, we have emphasized the note of installation, usage and maintenance, it is important to read this manual before installation and using of the product.

Please check and make sure if the product is same as your order, make sure the product is in good condition and if the SPEC can satisfy you. Please feedback ASAP once you find any defects in the product.

Transportation

* Package of this product is normal, please use same package in transport to prevent the product from deformation and damage.

* Please store the product in dry condition and put in original package before installation to

prevent dust accumulation. Client can reject the product in case the package is damaged or the product is used.

* Please do not knock, fall down or put heavy item on the product.

Maintenance Code

[illegible]

Notes for installer and user

- * Only qualified technicians can install the product.
- * Installation must be under national requirement
- * Related equipments for installation must comply with the following
 - 2006/95/CE low voltage installation regulation
 - 2004/108/CE electromagnetic compatibility regulation.
- * Product applicable in rated sites.
- * The equipment is not suitable for use in explosive or corrosive conditions
- * Please make sure there is sufficient recycling air inside the space in case the product used in boiler-room or Combustion equipment room.
- * This product is not suitable for children or infirm people unless who are supervised by the responsible person to ensure their safe use of the product. Children do not play with the product.

Notes in installation

- * Make sure there is not any inhalation of any other items.
- * Make sure all the accessories to be ready for installation, and the bracket can stand the full-load of the fan.
- * Make sure the power is off (even the product is switch off) before using.
- * Check and make sure the main power voltage and HZ is same as rated data in label sticker.
- * The power must have two poles, and the contactors distance must be at least 3mm.
- * Wiring must comply with national regulation.
- * Please make sure the wiring is correct before earth wire connection, and make sure connection of the over heat and overload wires is correct.
- * The duct only used for the equipment if the fan installed inside the duct.

Before starting

Please make sure the below before starting,

- * Product fixed well and wiring is correct
- * Safe protection is installed
- * No any other items inside fan and ducts.
- * Earth wire correct connected
- * Safety protection well connected and adjusted to suitable condition.
- * wire and connection insulation and water proof.

Starting,

- * Impellers rotating direction is correct
- * No any abnormal vibration
- * Once the power device is tripping, must switch off the main power, then examine all the steps before re-starting the machine.

Maintenance

- * Switch off both main power and machine to prevent power supplied by others before maintenance.
- * Regular check on the machine and ambience to prevent dust accumulation on the impellers, motor and safety net from hazards arising or shorten the product life.
- * Do not destroy the balance of the impellers in cleaning operation.
- * All maintenance and repairing operation must comply with national safe regulation

Wiring instruction

