



Always better with

Iwata

SHREDDER USER MANUAL



110 SHEETS
Cross-Cut

AUTOMATIC PAPER SHREDDER

SHRED-
MASTER



WARNING : SAFETY INSTRUCTIONS, READ BEFORE USING!



Read instructions before use.



Do not spray or keep any aerosol products in or around the shredder.



Avoid touching the document feed opening with hands.



Keep loose clothing or jewelry away from the paper entry slot.



Product is not intended for use by children (product is not a toy).



Avoid getting hair near the paper entry slot.



Do not insert foreign objects into the paper entry slot.



Keep away from moving parts.



Sharp blade edges!
Do not touch!

DO NOT SHREDS:



adhesive labels



unopened mail / envelopes



10+
stapled papers



stapled papers



>1/4" (6mm) heavy duty staples



 
bound documents



folded sheets



>32 mm
jumbo clips

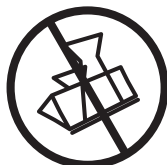

binder clips



 
credit cards



CDs/ DVDs



laminated sheets / magazines

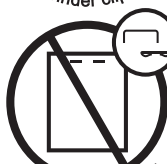

no staples in center



avoid placing staple side here



avoid placing staple side here

Note: Do not open lid once shred cycle has started

CONTINUED NEXT PAGE

WARNING : SAFETY INSTRUCTIONS, READ BEFORE USING!

- **Always** turn the shredder off and unplug the power cord from the AC outlet when not in use, before cleaning, moving, or emptying the waste basket.
- **RISK OF FIRE.** Never use any petroleum based or flammable oils or lubricants in or around the machine as some oils can combust causing serious injury.
- NEVER dispose of flammable chemicals or materials that have come into contact with flammable chemicals (for example, nail polish, acetone and gasoline) in the shredder basket.
- **Never** shred metal credit cards, large paper clips, window or insulated envelopes, continuous forms, newsprint, bound pages (for example: notepads, checkbooks, magazines, etc...), transparencies, laminated documents, cardboard, any items with adhesives, hard materials or plastic (except Credit Cards).
- A socket-outlet should be near the equipment and be easily accessible.
- Never let the wastebasket become full. This will lead to shredded material being pulled back up into the shredder and cause jams.
- Never place the shredder near water or any heat source.
- Do not use the shredder if the power cord is damaged in any way.
- Do not attempt to service this product yourself as doing so may expose you to sharp cutting blades and/or electricity and will void the manufacturer's warranty.
- Never try to clean or clear the shredder blade.
- Never shred beyond the specified sheet capacity. This may result in extensive damage to the machine.

Paper Shredder Operating Instructions

• Warning • Installation • Operation

	Auto Feed Tray:	Manual Feed Slot:
Sheet Capacity	110 Sheets of A4	8 Sheets of A4
Paper Shred Size	4.0 mm x 14 mm	4.0 mm x 14 mm
Paper Tray Size:	A4	N/A
Paper Entry Width	220 mm	220 mm
Credit Card Capacity	N/A	Only one per pass
Duty Cycle	30 min. on / 45 min. off	10 min. on / 45 min. off
Voltage	AC220-240V, 50/60Hz, 1.0A	AC220-240V, 50/60Hz, 1.0A

* Manual Feed:

- Shreds credit cards, small paper clips, staples
- One folded sheet of paper equates to 2 sheets of paper
- Heavier paper, humidity or electrical voltage other than the rated voltage may reduce shredding capacity

INS TALLATION

1. Make sure the basket door is securely closed shut. This shredder features a safety power cut off and will not operate if door is open. Shredders with pull-out wastebaskets will also cut power upon bin removal. The supplied wastebasket activates a safety switch, which allows the shredder to be operable.
2. Attach all 4 caster wheels to the bottom of the wastebasket(FIGURE 1)
3. A socket-outlet should be near the equipment and be easily accessible.
4. Connect the power cord to any standard 220 volt AC outlet.

⚠ Caution:


Microcut shredders have very sharp exposed blades on the underside. Do not touch. Unplug the shredder before clearing paper jams.

Use care when mounting the shredder on the wastebasket.



FIGURE 1

 OPERATION

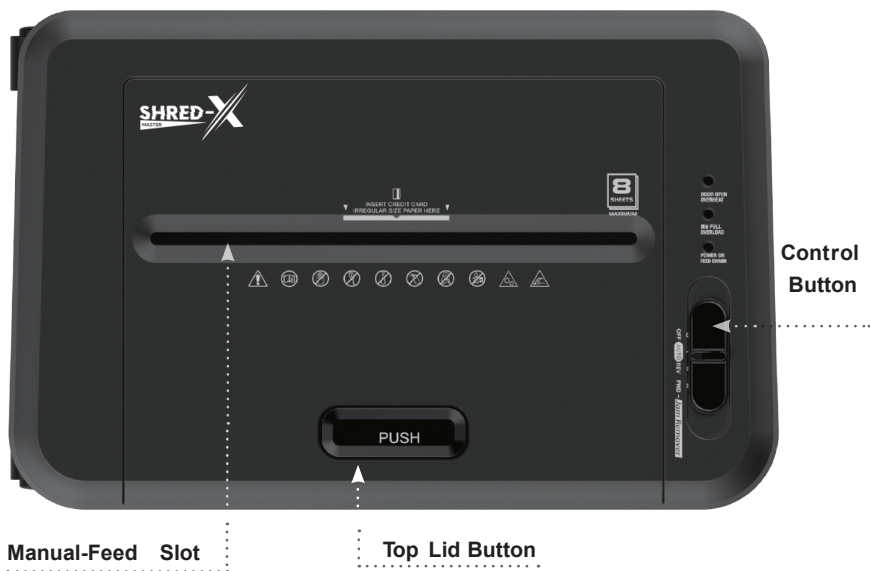

1 Control Switch

- Using the switch located on the unit, select one of the following settings by sliding the switch either left or right.(FIGURE 2)



FIGURE 2

Auto / On: This setting allows the shredder to be automatically started by inserting paper into the feed slot. Always feed the paper in as straight as possible. When the paper has passed through, the shredder will automatically stop.

Off: This setting turns off all features of the shredder. For safety reasons, we recommend that you leave the shredder in the OFF position whenever the shredder is unattended or not in use.

Reverse: In the unlikely event of a paper jam, the reverse setting can be used to help clear the cutters of paper that did not pass through. Never attempt to clear a jam by using the reverse function until you have emptied the wastebasket.

Forward (Jam Remover): The forward setting can also be used to help clear the cutters in the event of a paper jam. This allows to manually activate the shredder into cutting mode.

TROUBLESHOOTING

■ LED Status Indicators:

Door Open / Overheat:

Red indicator remains lit: The shredder basket or top lid is not closed properly. Shredders with pullout wastebaskets feature a safety power cut off upon bin removal. Make sure the pull-out wastebasket is properly set back into place and the "Power On" indicator is lit.

Red indicator remains flashing: The shredder has shredded continuously beyond the maximum running time, overheated, and will automatically shut off.

If this happens, switch the shredder to off mode for 45 minutes or longer before resuming normal operation.



Bin Full / Overload:

Red indicator remains lit: When basket is full, RED light will indicate it needs to be emptied. While lit, the shredder will not operate until the wastebasket is cleared.

Red indicator remains flashing: It indicates when too much paper is inserted. Use the "Reverse" mode to back up and reduce number of sheets.

Power On / Feed Error:

Green indicator remains lit: Auto mode. While the shredder is in Auto mode, insert paper or card into the slot or load the paper in the paper tray for shredding work.

Green indicator remains flashing: The paper in the paper tray cannot be grabbed by the feeder. Open lid to make sure papers are unfolded and positioned properly.

OPERATION

■ Features:

• Auto-Reverse Technology:

When shredder detects over-capacity shredding, the motor will immediately stop and reject paper before actual shredding begins.

 
■ Auto-Feed Shredding Operation:

• Auto-Feed Shredding Capacity:

Shreds:

- Maximum 110 sheets of A4
- Up to 10 sheets stapled paper stacks
- Up to 10 sheet clipped paper stacks

• Power on shredder

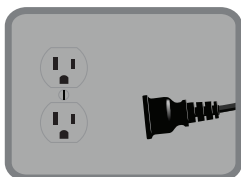


- ❶ Plug into ground standard household power outlet (220-V).



- ❷ Push the switch to auto position

 • Open lid and load paper*

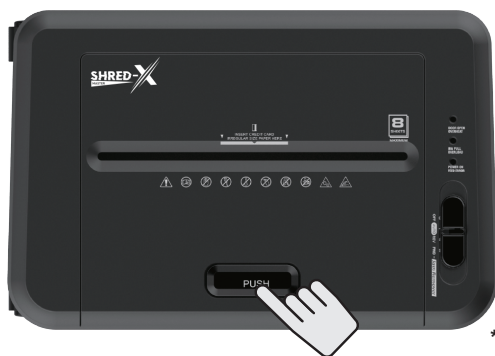

* Paper should be flat and aligned with paper tray.

CONTINUED NEXT PAGE

OPERATION

 
• Close lid:

The shredder automatically starts when you close the lid.



■ Manual-Feed Shredding Operation:


• Power on shredder

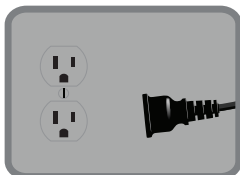

- 1 Plug into ground standard household power outlet (220-V).



 - 2 Push the switch to auto position

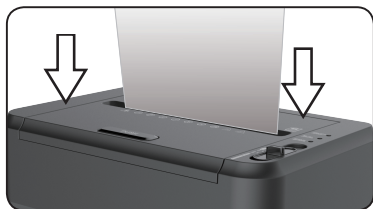

- 3 Make sure you do not exceed sheet count per pass (8 sheets max). **Insert paper as straight as possible into feed slot and release.**



- 4 Insert one credit card at a time into the middle of the feed slot.

■ NOTE:

- Always turn off and unplug the shredder when not in use.
- This shredder will shred staples and small paper clips. It is recommended that you remove paper clips whenever possible to extend the lifespan of your shredder.
- Only shred credit cards by feeding them vertically into the middle of the entry, releasing when shredding begins. Never feed more than one credit card at a time.
- Overfeeding the shredder: Shredding beyond the specified sheet capacity can result in extensive damage to the shredder. Overfeeding will strain the machine and quickly wear and break the cutting blades and internal components.
- Overheating with extended use: In the event that the shredder has shredded continuously beyond the maximum running time and overheating, the unit will automatically shut off. If this happens, switch the shredder off for 45 minutes or longer before resuming normal operation.



Berton's Place #46 Sta. Rosa St. Barangay Manresa Quezon City, Philippines.
Tel Nos. 8442-3856; 8442-3866; 3448-7674; 3412-6155; 3413-9503; 8282-5049; 8282-5098
Email: iwata@colentco.com, iwata2@colentco.com, Website: www.colentco.com
lwata3@colentco.com, sales_mktg@colentco.com



Suite 300 Del Monte Mansion Building Del Monte Avenue corner
210 Speaker Perez St., Quezon City, Philippines
Tel Nos: 8742-8139 / 8742-8140 / 8742-1526 / 8740-3815
Mobile No.: 0917-5413633 Email: diversifiedcolentcdpi@gmail.com
Website: www.colent-iwata.com

FOR AFTER SALES SERVICE:



HELP SQUAD SERVICES, INC.

297 D. Tuazon Ave., Brgy. San Jose, Quezon City
Phone Nos.: 0908-8908597 (Smart) / 0917-1042611 (Globe) 0917-1082201 (Globe)
Email: helpsquadservices@gmail.com / sales_mktg@colentco.com